ECM-BYT

Intel® Bay Trail Processors 3.5” Micro Module

User’s manual

4th Ed – 12 November 2014

Part No. E2047392003R

FCC Statement

THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.

(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS "A" DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES.

THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.

Notice

This guide is designed for experienced users to setup the system within the shortest time. For detailed information, please always refer to the electronic user's manual.

Copyright Notice

Copyright © 2014 Avalue Technology Inc., ALL RIGHTS RESERVED.

No part of this document may be reproduced, copied, translated, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the prior written permission of the original manufacturer.

Trademark Acknowledgement

Brand and product names are trademarks or registered trademarks of their respective owners.

Disclaimer

Avalue Technology Inc. reserves the right to make changes, without notice, to any product, including circuits and/or software described or contained in this manual in order to improve design and/or performance. Avalue Technology assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright, or masks work rights to these products, and makes no representations or warranties that these products are free from patent, copyright, or mask work right infringement, unless

otherwise specified. Applications that are described in this manual are for illustration purposes only. Avalue Technology Inc. makes no representation or warranty that such application will be suitable for the specified use without further testing or modification.

Life Support Policy

Avalue Technology's PRODUCTS ARE NOT FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE PRIOR WRITTEN APPROVAL OF Avalue Technology Inc.

As used herein:

1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into body, or (b) support or sustain life and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in significant injury to the user.
2. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

A Message to the Customer

Avalue Customer Services

Each and every Avalue's product is built to the most exacting specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new Avalue device is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Avalue has come to be known.

Your satisfaction is our primary concern. Here is a guide to Avalue's customer services. To ensure you get the full benefit of our services, please follow the instructions below carefully.

Technical Support

We want you to get the maximum performance from your products. So if you run into technical difficulties, we are here to help. For the most frequently asked questions, you can easily find answers in your product documentation. These answers are normally a lot more detailed than the ones we can give over the phone. So please consult the user's manual first.

To receive the latest version of the user's manual; please visit our Web site at:
http://www.avalue.com.tw/

Product Warranty

Avalue warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Avalue, or which have been subject to misuse, abuse, accident or improper installation. Avalue assumes no liability under the terms of this warranty as a consequence of such events. Because of Avalue's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If any of Avalue's products is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time, and freight. Please consult your dealer for more details. If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU type and speed, Avalue's products model name, hardware & BIOS revision number, other hardware and software used, etc.) Note anything abnormal and list any on-screen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information available.
3. If your product is diagnosed as defective, obtain an RMA (return material authorization) number from your dealer. This allows us to process your good return more quickly.
4. Carefully pack the defective product, a complete Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

CONTENT

1. Getting Started 8
1.1 Safety Precautions 8
1.2 Packing List 8
1.3 Document Amendment History 9
1.4 Manual Objectives 10
1.5 System Specifications 11
1.6 Architecture Overview – Block Diagram 13
2. Hardware Configuration 14
2.1 Product Overview 15
2.2 Installation Procedure 17
2.2.1 Main Memory 18
2.3 Jumper and Connector List 20
2.4 Setting Jumpers & Connectors 22
2.4.1 Clear CMOS (JBAT1) 22
2.4.2 COM 1 pin 9 signal select (JRI1) 22
2.4.3 AT/ ATX Input power select (JAT1) 23
2.4.4 LCD backlight brightness adjustment (JBKL_SEL1) 23
2.4.5 Touch connector select jumper (JTOUCH_SEL1) 24
2.4.6 Touch connector (JTOUCH1) 24
2.4.7 Battery connector (BT1) 25
2.4.8 CPU fan connector (CPU_FAN1) 25
2.4.9 PS/2 keyboard & mouse connector (JKBMS1) 26
2.4.10 LCD inverter connector (JBKL1) 26
2.4.10.1 Signal Description – LCD Inverter Connector (JBKL1) 26
2.4.11 On-board header for USB2.0 (JUSB3_4) 27
2.4.12 On-board header for USB2.0 (H_JUSB12) 27
2.4.13 Low pin count connector (JLPC1) 28
2.4.14 Serial port 1 connector (COM1) 28
2.4.15 Serial port 2 connector (COM2) 29
2.4.16 Serial port 3 connector (COM3) 29
2.4.17 Serial port 4 connector (COM4) 30
2.4.18 General purpose I/O connector (JDIO1) 30
2.4.19 Miscellaneous setting connector (JFP1) 31
2.4.20 BIOS SPI connector (BIOS_SPI1) 31
2.4.21 EC Debug connector (JEC_ROM1) 32

2.4.22 Audio connector (JAUDIO1) 32
2.4.22.1 Signal Description – Audio connector (JAUDIO1) 32
2.4.23 LVDS connector (JLVDS1) 33
2.4.24 Power connector (PWR1) 34
2.4.25 SATA power connector (SATA_PWR1) 34
3. BIOS Setup 35
3.1 Introduction 36
3.2 Starting Setup 36
3.3 Using Setup 37
3.4 Getting Help 38
3.5 In Case of Problems 38
3.6 BIOS setup 39
3.6.1 Main Menu 39
3.6.1.1 System Language 39
3.6.1.2 System Date 39
3.6.1.3 System Time 39
3.6.2 Advanced Menu 40
3.6.2.1 APCI Settings 40
3.6.2.2 F81216 Super IO Configuration 41
3.6.2.2.1 Serial Port 1 Configuration 42
3.6.2.2.2 Serial Port 2 Configuration 43
3.6.2.2.3 Serial Port 3 Configuration 44
3.6.2.2.4 Serial Port 4 Configuration 45
3.6.2.3 H/W Monitor 46
3.6.2.4 S5 RTC Wake Settings 46
3.6.2.5 Serial Port Console Redirection 47
3.6.2.6 CPU Configuration 48
3.6.2.6.1 Socket 0 CPU Information 49
3.6.2.7 PPM Configuration 49
3.6.2.8 IDE Configuration 50
3.6.2.9 Network Stack Configuration 51
3.6.2.10 CSM Configuration 51
3.6.2.11 USB Configuration 52
3.6.2.12 Security Configuration 53
3.6.2.13 Lan driver report status 54
3.6.3 Chipset 55
3.6.3.1 North Bridge 55
3.6.3.1.1 Intel IGD Configuration 56
3.6.3.1.2 IGD - LCD Control 57
3.6.3.2 South Bridge 58

3.6.3.2.1 Azalia HD Audio 58
3.6.3.2.2 USB Configuration 59
3.6.3.2.3 PCI Express Configuration 60
3.6.4 Security 60
3.6.5 Boot 61
3.6.6 Save and exit 62
3.6.6.1 Save Changes and Reset 63
3.6.6.2 Discard Changes and Reset 63
3.6.6.3 Restore Defaults 63
3.6.6.4 Launch EFI Shell from filesystem device 63
4. Drivers Installation 64
4.1 Install Chipset Driver 65
4.2 Install MBI Driver 66
4.3 Install TXE Driver 67
4.4 Install VGA Driver 68
4.5 Install Audio Driver (For Realtek ALC892) 69
4.6 Install Ethernet Driver (For Intel I211AT) 70
5. Mechanical Drawing 71

1. Getting Started

1.1 Safety Precautions

Warning!

Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

Caution!

Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

1.2 Packing List

Before you begin installing your single board, please make sure that the following materials have been shipped:

- 1 x 3.5" ECM-BYT Micro Module
- 1 x Quick Installation Guide for ECM-BYT
- 1 x AUX-032 daughter board W/Audio/4USB
- 1 x DVD-ROM contains the followings:
  - User's Manual (this manual in PDF file)
  - Ethernet driver and utilities
  - VGA drivers and utilities
  - Audio drivers and utilities
- 1 x Cable set contains the followings:
  - 1 x Audio cable (12pin,2.0 pitch)
  - 1 x USB 2.0 cable (10P/2.0mm-10P/2.54mm)
  - 1 x Serial ATA cable (7-pin, standard)
  - 1 x Wire SATA power cable (15-pin,2P/2.0mm)
  - 1 x Flat cable 9P(M)-PHD 10P/2.0mm)
- 3M foam (VHB-4622 10mm*20mm*1.1mm)

1.3 Document Amendment History

Revision	Date	By	Comment
1st	April 2014	Avalue	Initial Release
2nd	June 2014	Avalue	Update Specifications
3rd	September 2014	Avalue	Update BIOS Setup
4th	November 2014	Avalue	Remove PWR_SB1 connector

1.4 Manual Objectives

This manual describes in detail the Avalue Technology ECM-BYT Single Board.

We have tried to include as much information as possible but we have not duplicated information that is provided in the standard IBM Technical References, unless it proved to be necessary to aid in the understanding of this board.

We strongly recommend that you study this manual carefully before attempting to interface with ECM-BYT series or change the standard configurations. Whilst all the necessary information is available in this manual we would recommend that unless you are confident, you contact your supplier for guidance.

Please be aware that it is possible to create configurations within the CMOS RAM that make booting impossible. If this should happen, clear the CMOS settings, (see the description of the Jumper Settings for details).

If you have any suggestions or find any errors concerning this manual and want to inform us of these, please contact our Customer Service department with the relevant details.

1.5 System Specifications

System	
CPU	Intel® Celeron® Processor J1900 Family Intel® Atom™ Processor E3800 Family
BIOS	AMI uEFI BIOS, 64Mbit SPI Flash ROM
System Chipset	Valleyview SoC integrated
I/O Chip	EC(IT8528E)
System Memory	1 x 204-pin DDR3L 1066/1333 SODIMM up to 8G
SSD	1 x CompactFlash Type I/II socket (Optional support InnoDIsk CF-SATA)
Watchdog Timer	H/W Reset, 1sec. – 65535sec./min. 1sec. or 1min. step
H/W Status Monitor	CPU & system temperature monitoring Voltages monitoring
Expansion	1 x mini-PCIe (mSATA supported)
Built-in Touch screen (optional)	chipset :PenMount 6000 Touch screen interface with 5-pin 2.0mm wafer (can be selected to support 4/5 wire touch screen)
I/O	
MIO	1 x SATA II, 3 x RS232, 1 x RS232/422/485
USB	1x USB3.0, 5 x USB 2.0
GPIO	4-bit GPI, 4-bit GPO
Display	
Chipset	Valleyview SoC integrated Graphics
Resolution	VGA Mode: 2560 x 1600@60Hz HDMI mode:1920 x 1200@60Hz LVDS mode:1920 x 1080@60Hz
Multiple Display	HDMI ＋ LVDS, CRT ＋ LVDS, CRT ＋ HDMI
HDMI	HDMI x 1
LCD Interface	Dual channel 18/24-bit LVDS
Audio	
AC97 Codec	Realtek ALC892 Supports 5.1-CH Audio
Ethernet	
LAN Chip	2 x Intel I211AT GbE controller
Ethernet Interface	10/100/1000 Base-Tx compatible
Mechanical &	

Environmental	
Power Requirement	+12V ~ +26V
ACPI	Single power ATX Support S0, S3, S4, S5 ACPI 3.0 Compliant
Power Type	AT / ATX
Operating Temp.	0°C ~ 60°C Optional Wide temp.: -40°C ~85°C
Storage Temp.	-40°C ~75°C Optional Wide temp.: -40°C ~85°C
Operating Humidity	0% ~ 90% relative humidity, non-condensing
Size (L x W)	4.5" x 6.5" (115mm x 165mm)
Weight	0.41 lbs (0.18 Kg)

1.6 Architecture Overview – Block Diagram

The following block diagram shows the architecture and main components of ECM-BYT.

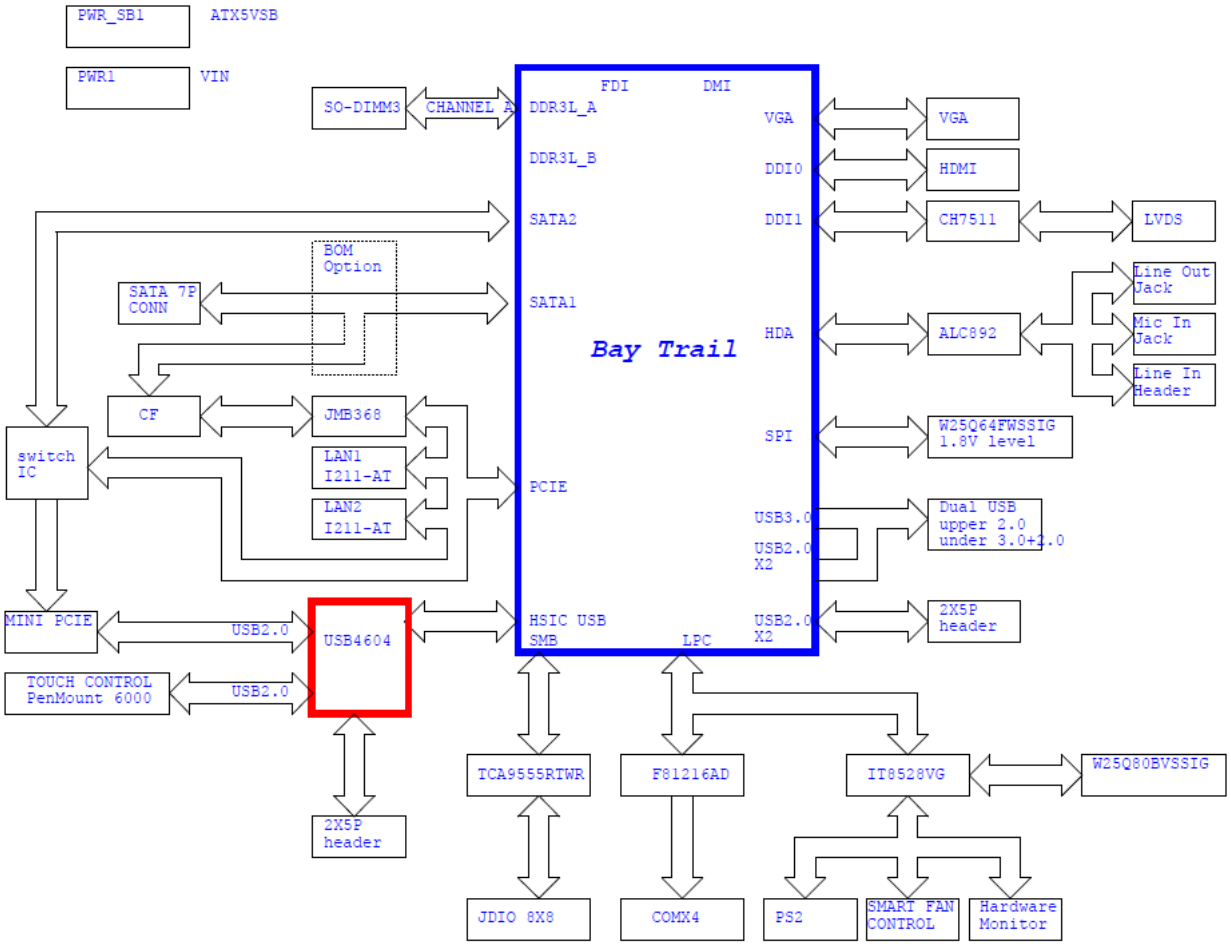

2. Hardware Configuration

2.1 Product Overview

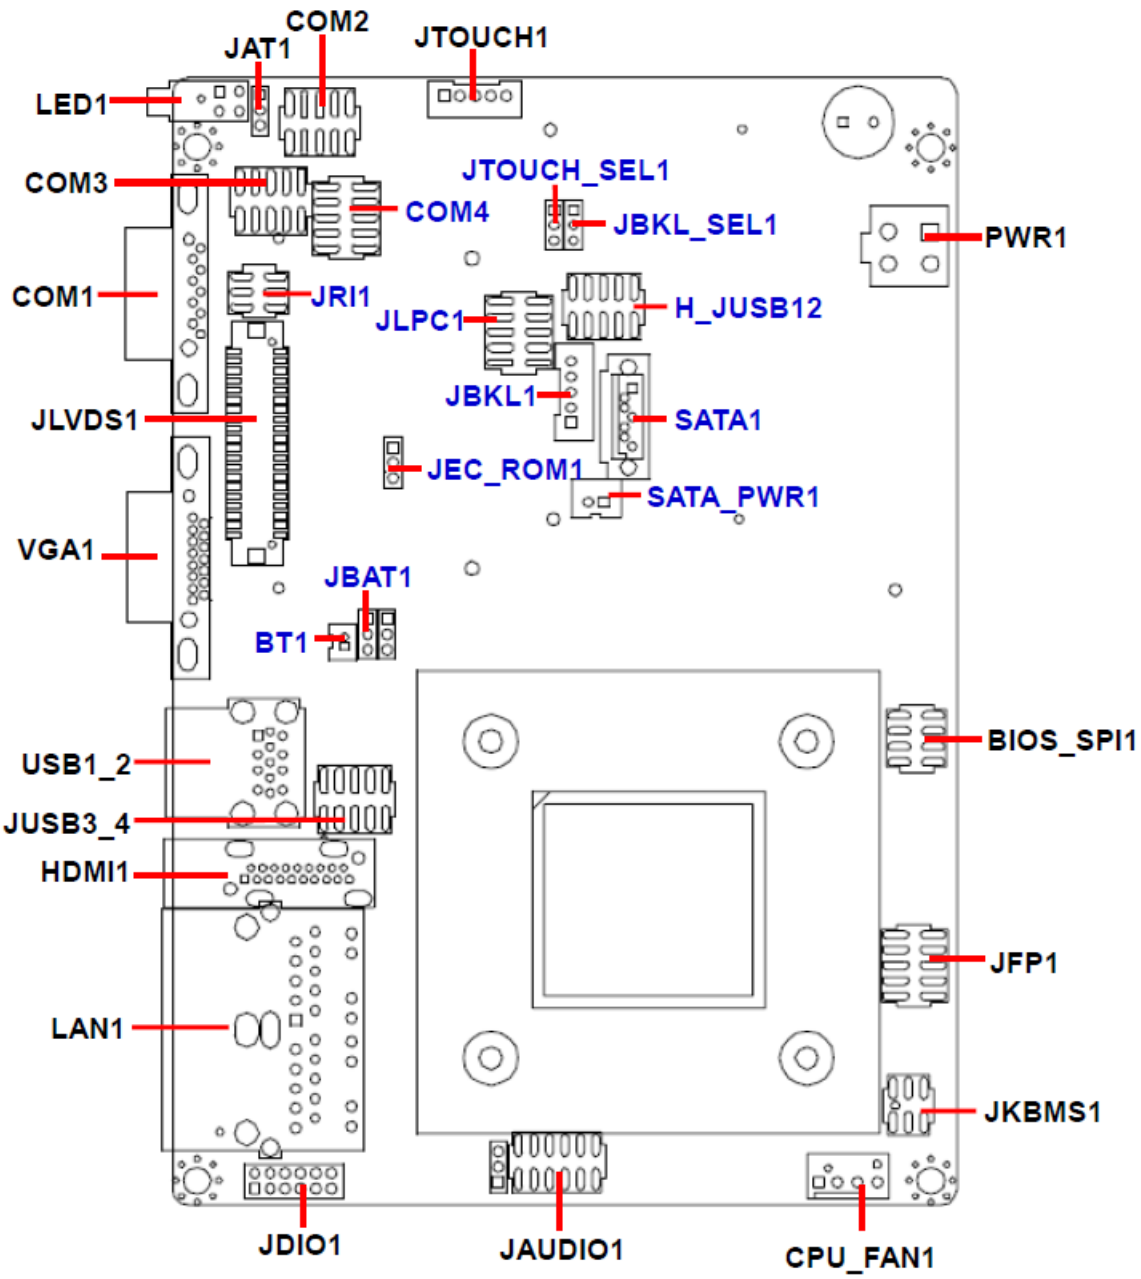

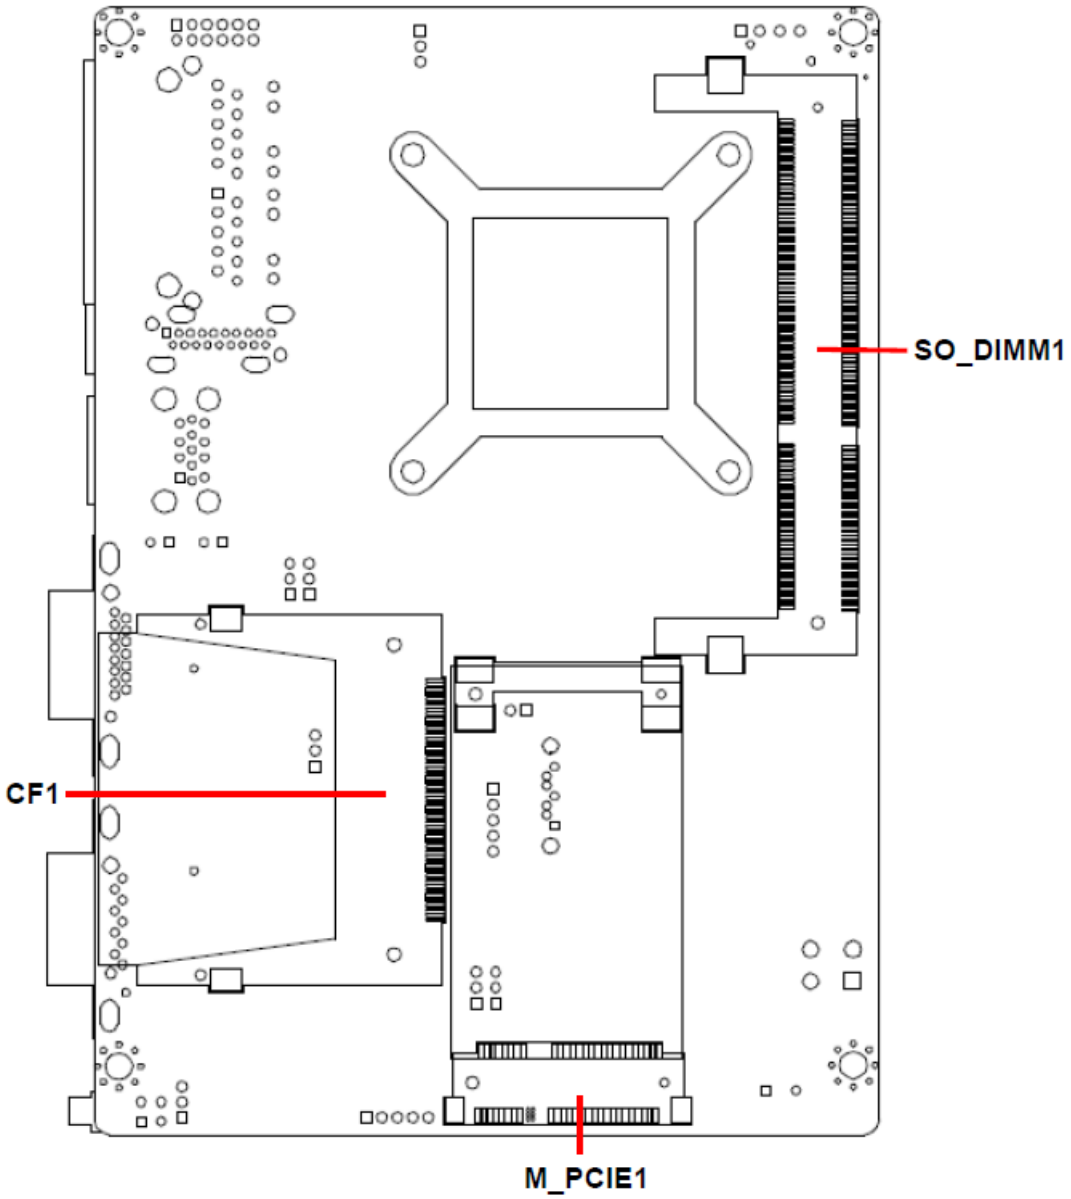
SO_DIMM1
CF1
M_PCIE1

2.2 Installation Procedure

This chapter explains you the instructions of how to setup your system.

1. Turn off the power supply.
2. Insert the SODIMM module (be careful with the orientation).
3. Insert all external cables for hard disk, floppy, keyboard, mouse, USB etc. except for flat panel. A CRT monitor must be connected in order to change CMOS settings to support flat panel.
4. Connect power supply to the board via the ATXPWR.
5. Turn on the power.
6. Enter the BIOS setup by pressing the delete key during boot up. Use the "LOAD BIOS DEFAULTS" feature. The ***Integrated Peripheral Setup*** and the ***Standard CMOS Setup*** Window must be entered and configured correctly to match the particular system configuration.
7. If TFT panel display is to be utilized, make sure the panel voltage is correctly set before connecting the display cable and turning on the power.

Note: Make sure the heat sink and the CPU top surface are in total contact to avoid CPU overheating problem that would cause the system to hang or unstable

2.2.1 Main Memory

ECM-BYT provides one 204-pin DDR3L SODIMM socket, supports up to 8GB DDR3L 1066/1333 SDRAM.

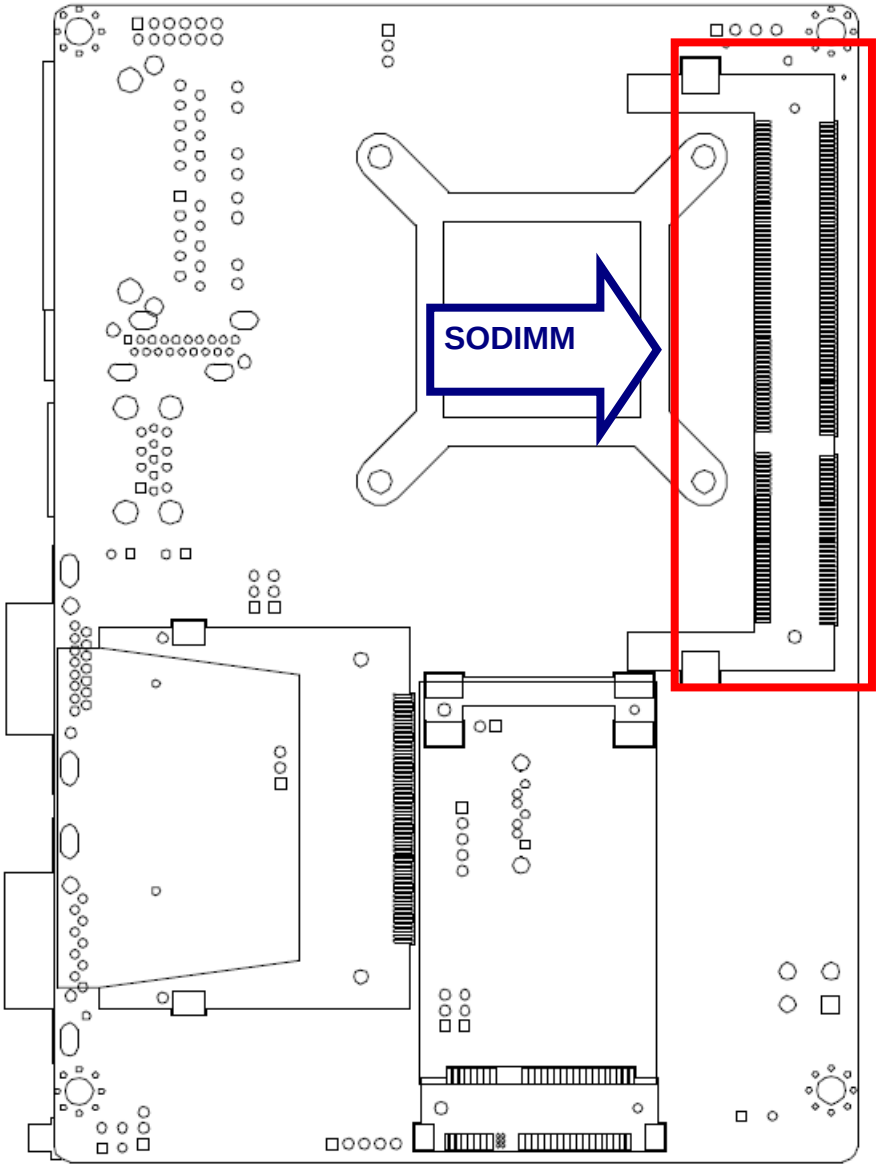

(Rear side)

Make sure to unplug the power supply before adding or removing SODIMMs or other system components. Failure to do so may cause severe damage to both the board and the components.

- Locate the SODIMM socket on the board.
- Hold two edges of the SODIMM module carefully. Keep away of touching its connectors.
- Align the notch key on the module with the rib on the slot.

- Firmly press the modules into the socket automatically snaps into the mounting notch. Do not force the SODIMM module in with extra force as the SODIMM module only fit in one direction.

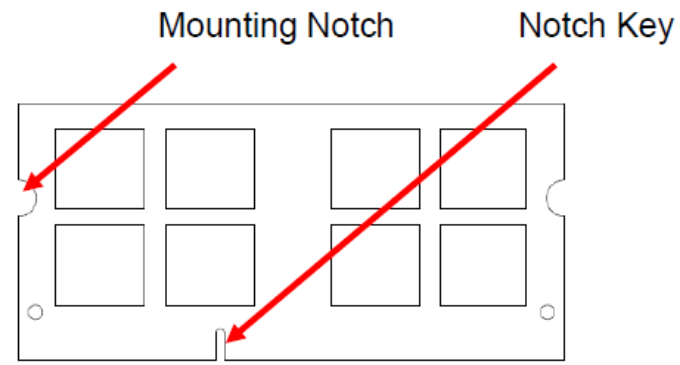

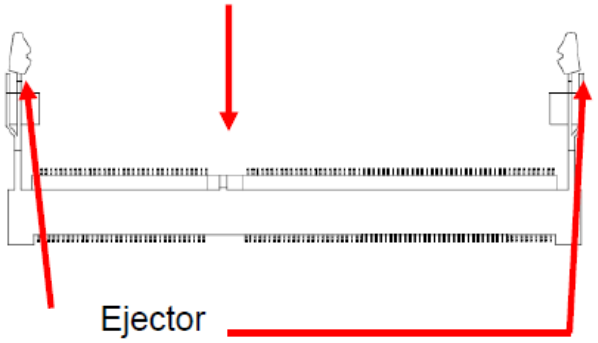

204-pin DDR3 SODIMM

- To remove the SODIMM modules, push the two ejector tabs on the slot outward simultaneously, and then pull out the SODIMM module.

Note:

(1) Please do not change any DDR3 SDRAM parameter in BIOS setup to increase your system's performance without acquiring technical information in advance.

(2) Static electricity can damage the electronic components of the computer or optional boards. Before starting these procedures, ensure that you are discharged of static electricity by touching a grounded metal object briefly.

2.3 Jumper and Connector List

You can configure your board to match the needs of your application by setting jumpers. A jumper is the simplest kind of electric switch.

It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To "close" a jumper you connect the pins with the clip. To "open" a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2, and 3. In this case, you would connect either two pins.



Open Closed Closed 2-3

The jumper settings are schematically depicted in this manual as follows:

Open Closed Closed 2-3

A pair of needle-nose pliers may be helpful when working with jumpers.

Connectors on the board are linked to external devices such as hard disk drives, a keyboard, or floppy drives. In addition, the board has a number of jumpers that allow you to configure your system to suit your application.

If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any changes.

The following tables list the function of each of the board's jumpers and connectors.

Jumpers

Label	Function	Note
JBAT1	Clear CMOS	3 x 1 header, pitch 2.00 mm
JRI1	COM 1 pin 9 signal select	3 x 2 header, pitch 2.00 mm
JAT1	AT/ ATX Input power select	3 x 1 header, pitch 2.00 mm
JBKL_SEL1	LCD backlight brightness adjustment	3 x 1 header, pitch 2.00 mm
JTOUCH_SEL1	Touch connector select jumper	3 x 1 header, pitch 2.00 mm

Connectors

Label	Function	Note
BT1	Battery connector	2 x 1 wafer, pitch 1.25 mm
CPU_FAN1	CPU fan connector	4 x 1 wafer, pitch 2.54 mm
HDMI1	HDMI connector	

JAUDIO1	Audio connector	6 x 2 header, pitch 2.00 mm
JBKL1	LCD inverter connector	5 x 1 wafer, pitch 2.00 mm
COM1	Serial port 1 connector	D-sub 9-pin, male **Note**：COM1 support RS422/485 by BIOS setting
COM2/3/4	Serial port 2/3/4 connector	5 x 2 header, pitch 2.00 mm
JDIO1	General purpose I/O connector	6 x 2 header, pitch 2.00 mm
JFP1	Miscellaneous setting connector	5 x 2 header, pitch 2.00 mm
JLPC1	Low pin count interface	5 x 2 header, pitch 2.00 mm
JLVDS1	LVDS connector	20 x 2 header, pitch 1.25 mm
JTOUCH1	Touch connector	5 x 1 header, pitch 2.00 mm
USB1_2	On-board connector for USB2.0 x 1 On-board connector for USB3.0 x 1	
JUSB3_4	On-board header for USB2.0	5 x 2 header, pitch 2.00 mm
H_JUSB12	On-board header for USB2.0	5 x 2 header, pitch 2.00 mm
JEC_ROM1	EC Debug connector	3 x 1 header, pitch 2.00 mm
LAN1	RJ-45 Ethernet connector	
LED1	LED connector	
PWR1	Power connector	2 x 2 wafer, pitch 4.20 mm
JKBMS1	PS/2 keyboard & mouse connector	3 x 2 header, pitch 2.00 mm
SATA_PWR1	SATA power connector	2 x 1 wafer, pitch 2.00 mm
SATA1	Serial ATA connector 1	
VGA1	VGA connector	D-sub 15-pin, female
BIOS_SPI1	BIOS SPI connector	4 x 2 header, pitch 2.00 mm
M_PCIE1	Mini-PCI connector	
SO_DIMM1	DDR3 SODIMM connector	
CF1	CF card slot	

2.4 Setting Jumpers & Connectors

2.4.1 Clear CMOS (JBAT1)

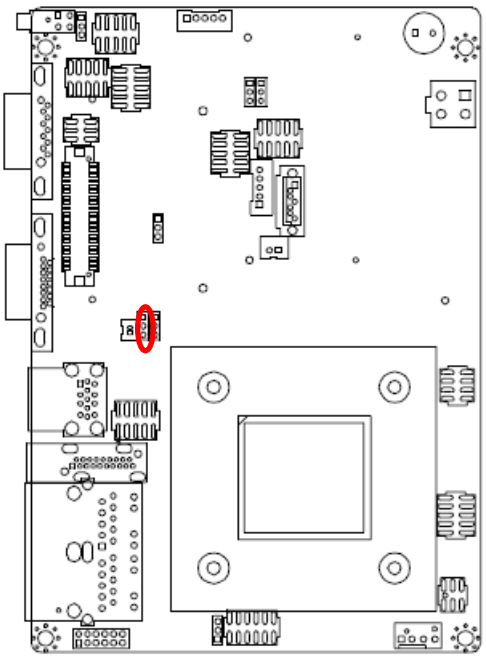

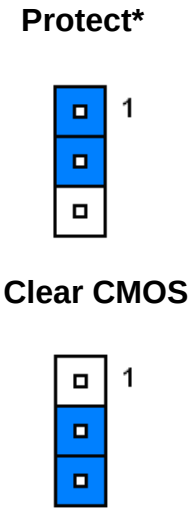

*** Default**

2.4.2 COM 1 pin 9 signal select (JRI1)

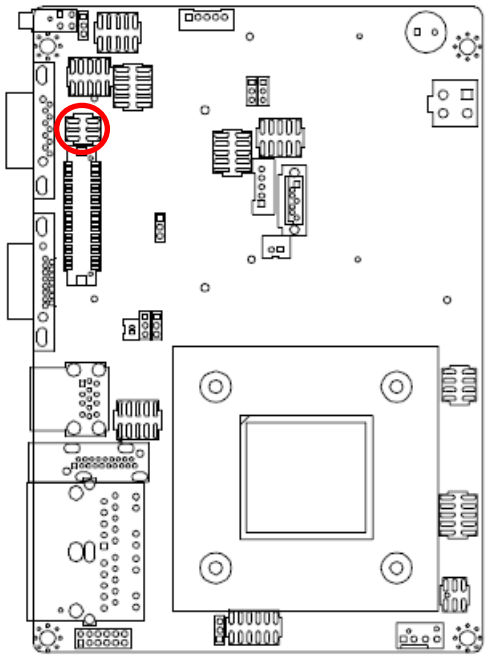

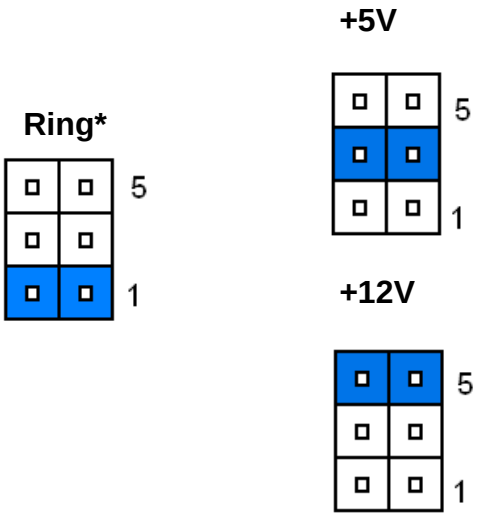

*** Default**

2.4.3 AT/ ATX Input power select (JAT1)

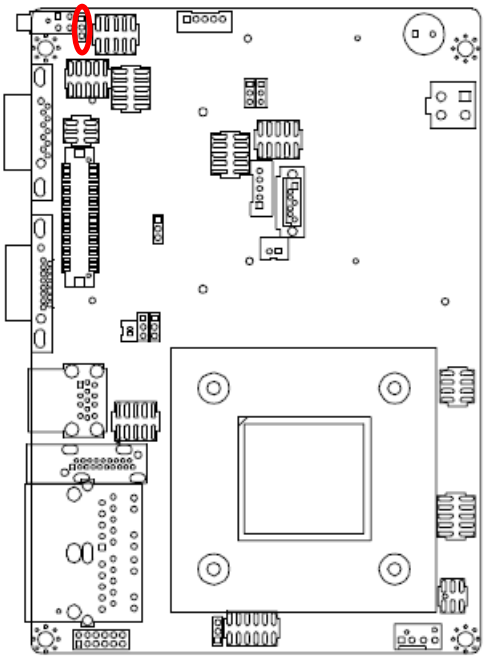

AT*

ATX

*** Default**

2.4.4 LCD backlight brightness adjustment (JBKL_SEL1)

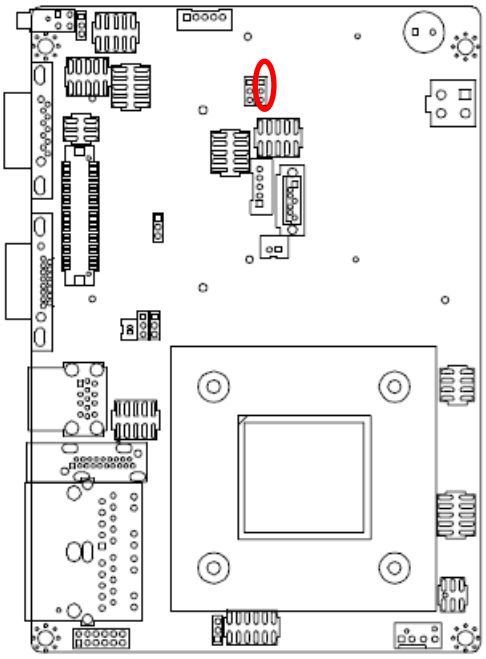

PWM Mode*



DC Mode

*** Default**

2.4.5 Touch connector select jumper (JTOUCH_SEL1)

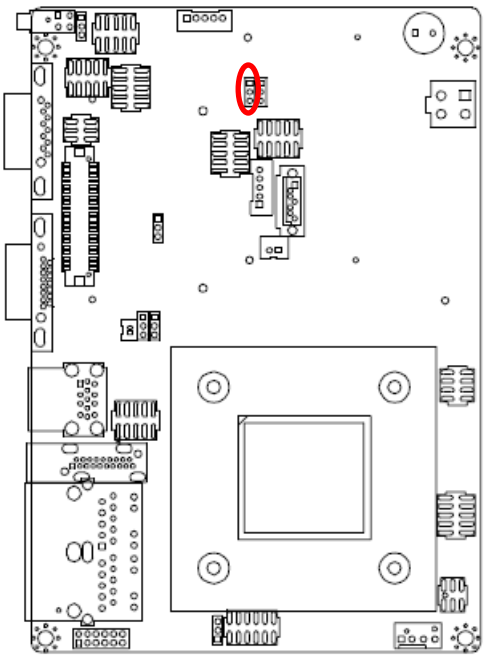

*** Default**

2.4.6 Touch connector (JTOUCH1)

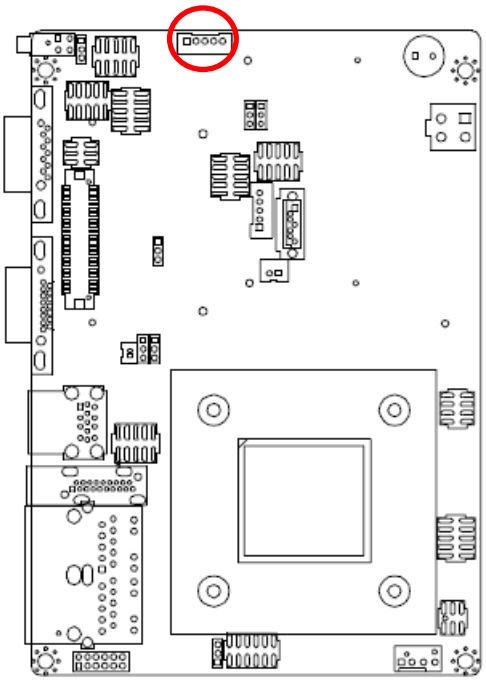



JTOUCH1	4-Wire	5-Wire
1	TOP	UL
2	Bottom	UR
3	NA	Sense
4	Right	LR
5	Left	LL

2.4.7 Battery connector (BT1)

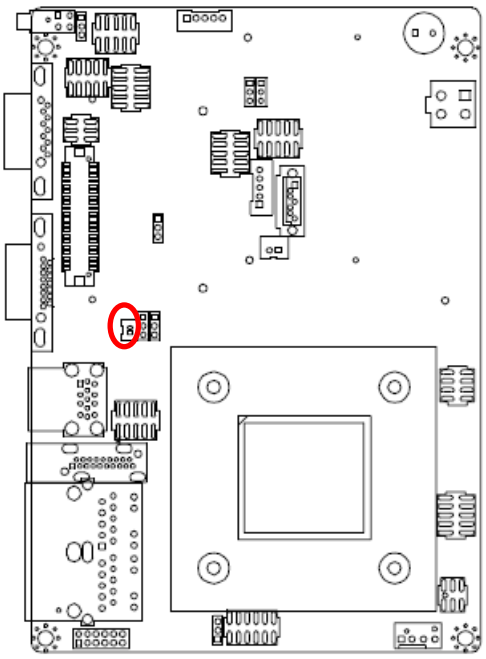



Signal	PIN
GND	2
+3.3V	1

2.4.8 CPU fan connector (CPU_FAN1)

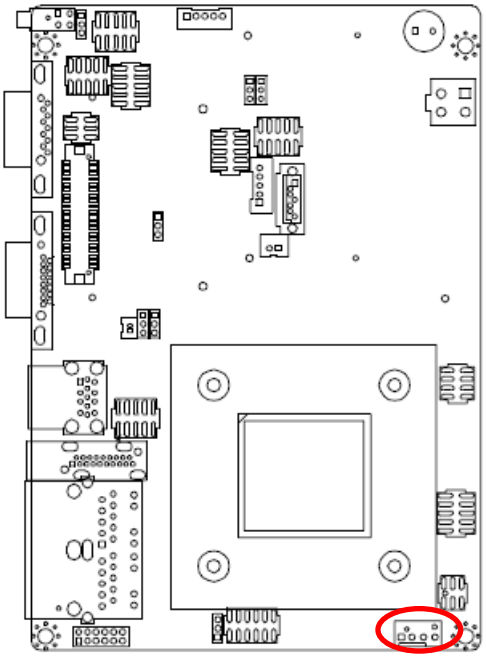

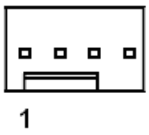

Signal	PIN
GND	1
+12V	2
EC_TACH0	3
FAN_PWM0	4

2.4.9 PS/2 keyboard & mouse connector (JKBMS1)

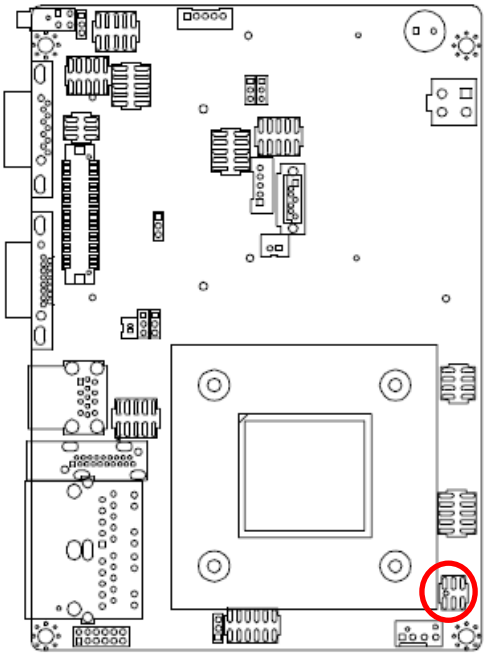

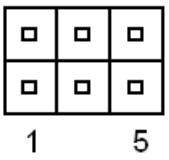

Signal	PIN	PIN	Signal
KBDT	1	2	KBCK
GND	3	4	KBVCC
MSDT	5	6	MSCK

2.4.10 LCD inverter connector (JBKL1)

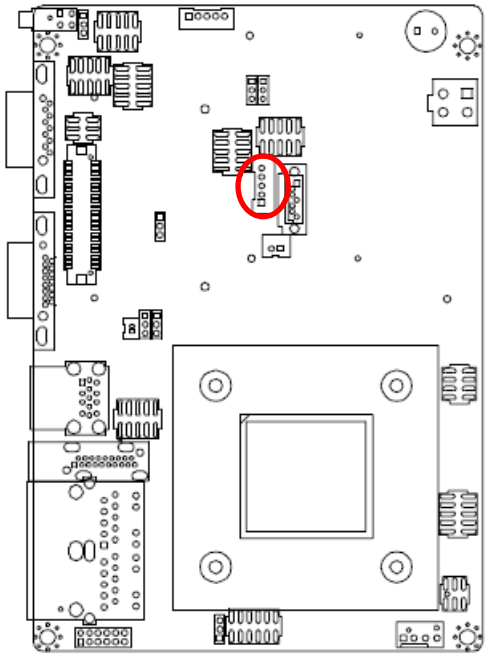



Signal	PIN
+5V	5
VBRIGHT	4
BKLEN	3
GND	2
+12V	1

2.4.10.1 Signal Description – LCD Inverter Connector (JBKL1)

Signal	Signal Description
VBRIGHT	Vadj = 0.75V ~ 4.25V (Recommended: 4.7KΩ, >1/16W)
BKLEN	LCD backlight ON/OFF control signal

2.4.11 On-board header for USB2.0 (JUSB3_4)

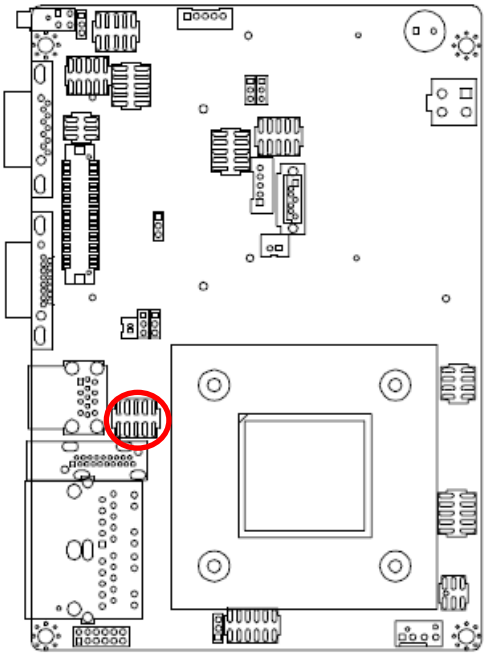

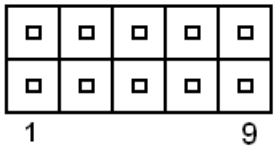

Signal	PIN	PIN	Signal
USBVCC23	1	2	GND
USB_DN_R_3	3	4	GND
USB_DP_R_3	5	6	USB_DP_R_2
GND	7	8	USB_DN_R_2
GND	9	10	USBVCC23

2.4.12 On-board header for USB2.0 (H_JUSB12)

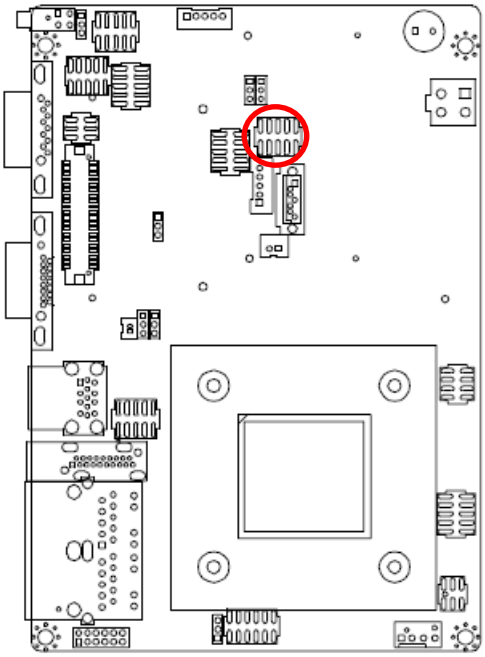

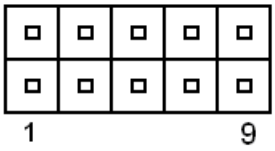

Signal	PIN	PIN	Signal
USBVCC_HSIC34	1	2	GND
HSIC_DN_2	3	4	GND
HSIC_DP_2	5	6	HSIC_DP_1
GND	7	8	HSIC_DN_1
GND	9	10	USBVCC_HSIC34

2.4.13 Low pin count connector (JLPC1)

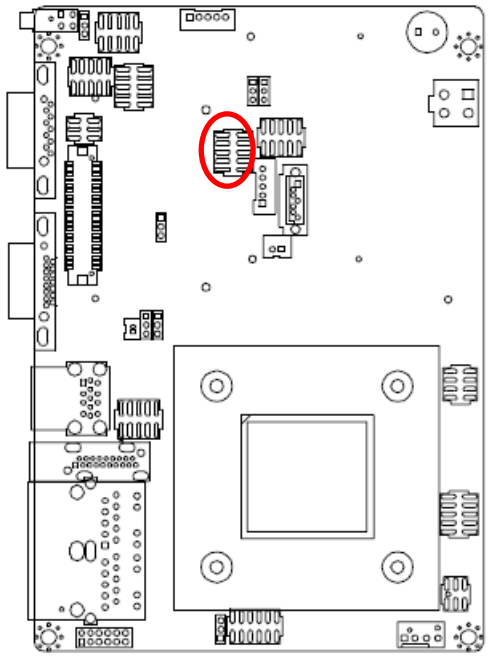

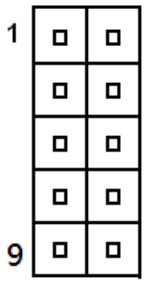

Signal	PIN	PIN	Signal
LPC_AD0	1	2	+3.3V
LPC_AD1	3	4	LPC_PORT80_RST#
LPC_AD2	5	6	LPC_FRAME#
LPC_AD3	7	8	LPC_PORT80_CLK
LPC_SERIRQ	9	10	GND

2.4.14 Serial port 1 connector (COM1)

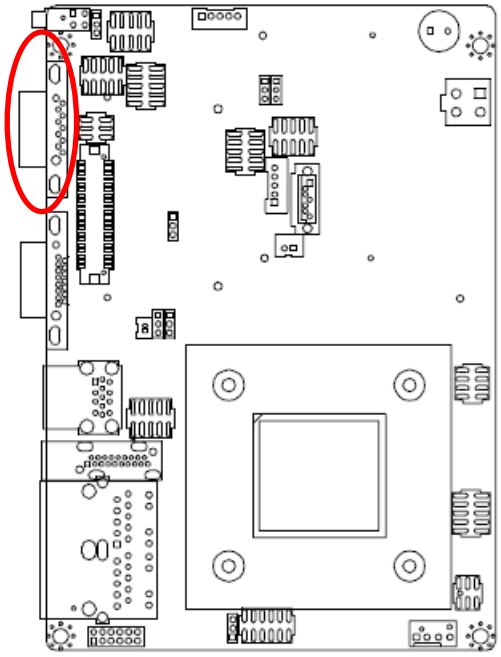

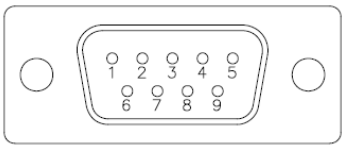

Signal	PIN	PIN	Signal
NDCDA#_485TXN	1	2	NRXDA_485TXP
NTXDA_485RXP	3	4	NDTRA#_485RXN
GND	5	6	NDSRA#
RTSA#	7	8	NCTSA#
NRIA#	9	10	NC

2.4.15 Serial port 2 connector (COM2)

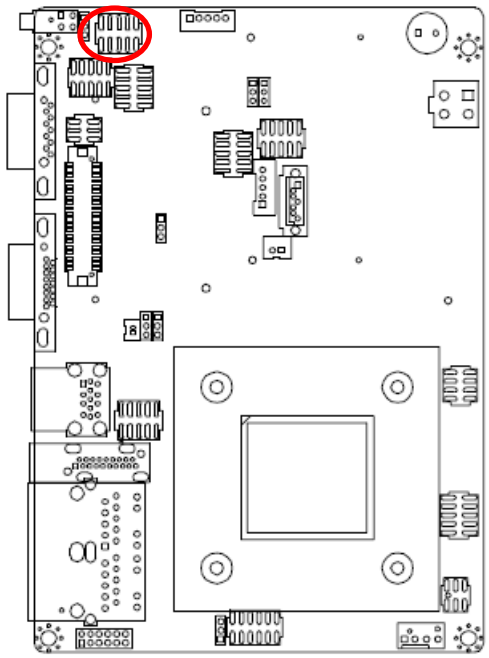

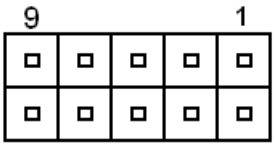

Signal	PIN	PIN	Signal
COM_DCD#_2	1	2	COM_RXD_2
COM_TXD_2	3	4	COM_DTR#_2
GND	5	6	COM_DSR#_2
COM_RTS#_2	7	8	COM_CTS#_2
COM_RI#_2	9	10	NC

2.4.16 Serial port 3 connector (COM3)

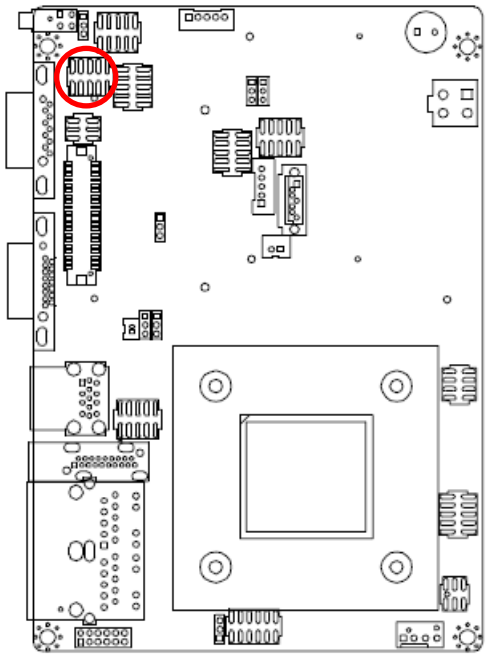

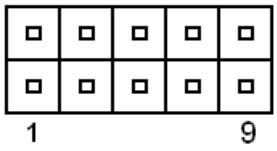

Signal	PIN	PIN	Signal
COM_DCD#_3	1	2	COM_RXD_3
COM_TXD_3	3	4	COM_DTR#_3
GND	5	6	COM_DSR#_3
COM_RTS#_3	7	8	COM_CTS#_3
COM_RI#_3	9	10	NC

2.4.17 Serial port 4 connector (COM4)

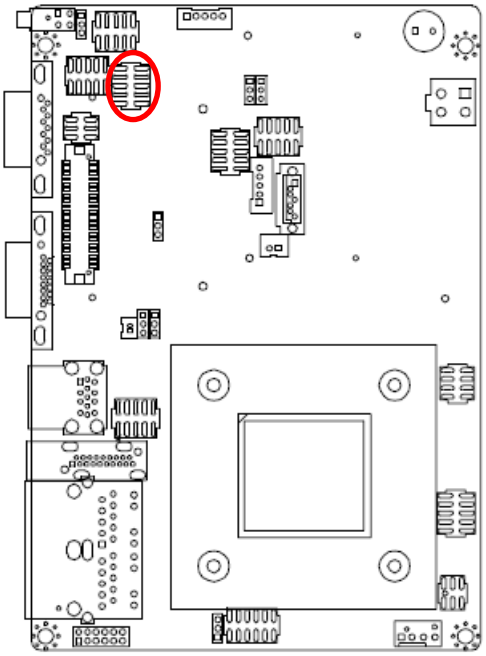

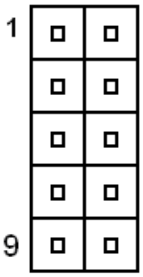

Signal	PIN	PIN	Signal
COM_DCD#_4	1	2	COM_RXD_4
COM_TXD_4	3	4	COM_DTR#_4
GND	5	6	COM_DSR#_4
COM_RTS#_4	7	8	COM_CTS#_4
COM_RI#_4	9	10	NC

2.4.18 General purpose I/O connector (JDIO1)

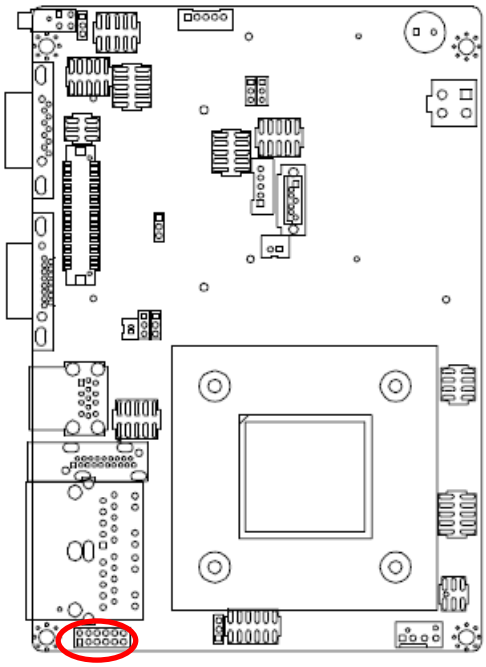

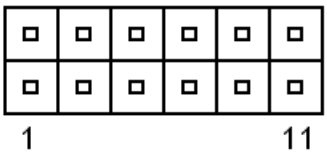

Signal	PIN	PIN	Signal
DIO_GP20	1	2	DIO_GP10
DIO_GP21	3	4	DIO_GP11
DIO_GP22	5	6	DIO_GP12
DIO_GP23	7	8	DIO_GP13
SMB_CLK_9555	9	10	SMB_DATA_9555
GND	11	12	+5V

2.4.19 Miscellaneous setting connector (JFP1)

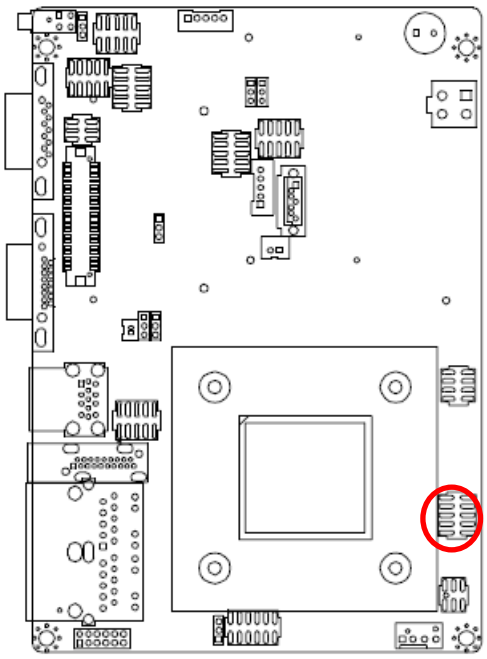

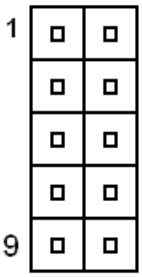

Signal	PIN
PWBT	1
	2
RST#	3
	4
PWR-LED+	5
PWR-LED-	6
HDD-LED-	7
HDD-LED+	8
COPEN#	9
	10

2.4.20 BIOS SPI connector (BIOS_SPI1)

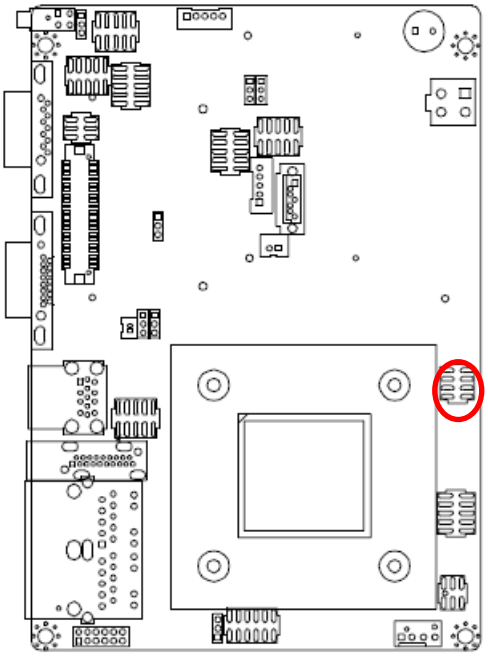

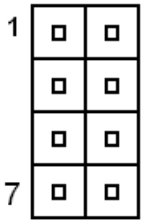

Signal	PIN	PIN	Signal
+VSPI_BIOS	1	2	GND
SPI_ROM_CS#	3	4	SPI_ROM_CLK
SPI_ROM_MISO_R	5	6	SPI_ROM_MOSI
SPI_HOLD#	7	8	NC

2.4.21 EC Debug connector (JEC_ROM1)

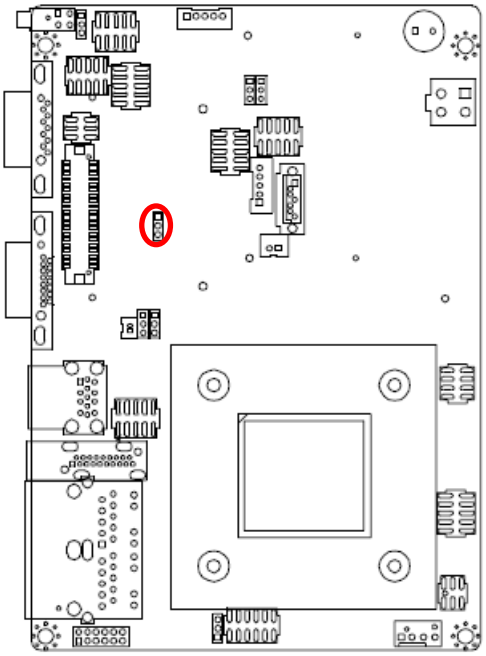



Signal	PIN
EC_SMCLK_DEBUG	1
EC_SMDAT_DEBUG	2
GND	3

2.4.22 Audio connector (JAUDIO1)

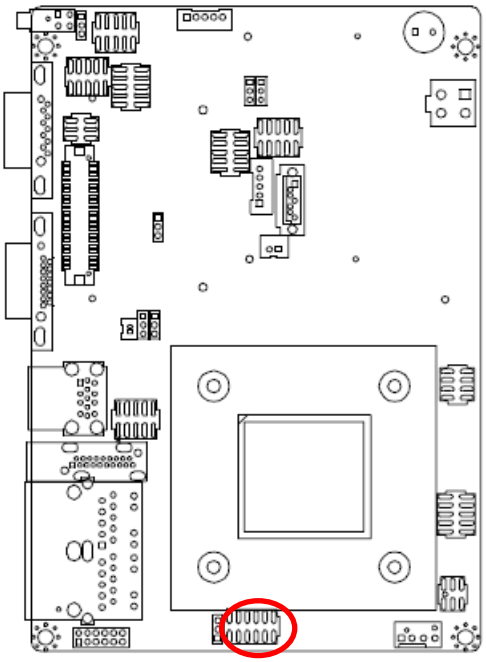

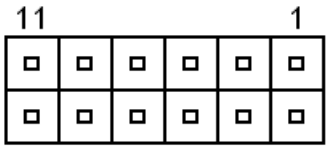

Signal	PIN	PIN	Signal
FRONT-R-OUT	1	2	FRONT-L-OUT
HD_AGND	3	4	HD_AGND
LINE1-R-IN	5	6	LINE1-L-IN
MIC1-R-IN	7	8	MIC1-L-IN
FRONT-JD	9	10	LINE1-JD
MIC1-JD	11	12	HD_AGND

2.4.22.1 Signal Description – Audio connector (JAUDIO1)

Signal	Signal Description
LINE1_JD	AUDIO IN (LINE_RIN/LIN)sense pin
FRONT_JD	AUDIO Out(ROUT/LOUT) sense pin
MIC1_JD	MIC IN (MIC_RIN/LIN) sense pin

2.4.23 LVDS connector (JLVDS1)

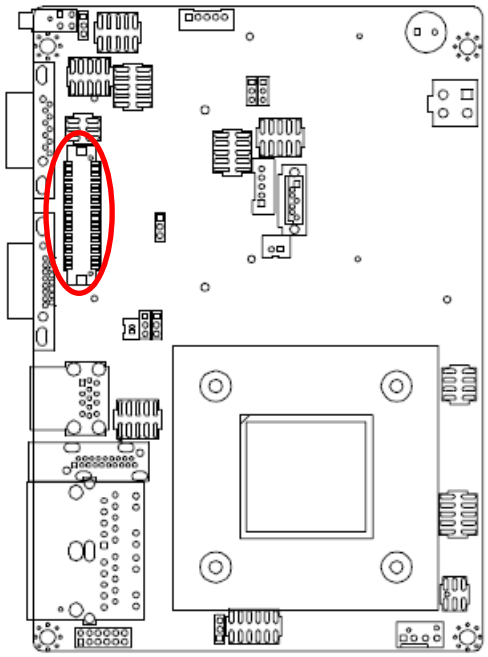



Signal	PIN	PIN	Signal
+5V	2	1	+3.3V
+5V	4	3	+3.3V
NC	6	5	NC
GND	8	7	GND
LVDS_DATA0_P	10	9	LVDS_DATA1_P
LVDS_DATA0_N	12	11	LVDS_DATA1_N
GND	14	13	GND
LVDS_DATA2_P	16	15	LVDS_DATA3_P
LVDS_DATA2_N	18	17	LVDS_DATA3_N
GND	20	19	GND
LVDS_DATA4_P	22	21	LVDS_DATA5_P
LVDS_DATA4_N	24	23	LVDS_DATA5_N
GND	26	25	GND
LVDS_DATA6_P	28	27	LVDS_DATA7_P
LVDS_DATA6_N	30	29	LVDS_DATA7_N
GND	32	31	GND
LVDS_CLK1_P	34	33	LVDS_CLK2_P
LVDS_CLK1_N	36	35	LVDS_CLK2_N
GND	38	37	GND
+12V	40	39	+12V

2.4.24 Power connector (PWR1)

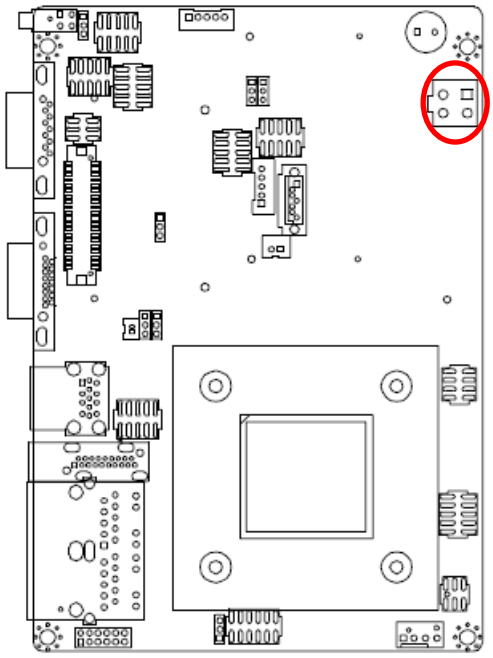



Signal	PIN	PIN	Signal
VIN_IN	3	1	GND
VIN_IN	4	2	GND

2.4.25 SATA power connector (SATA_PWR1)

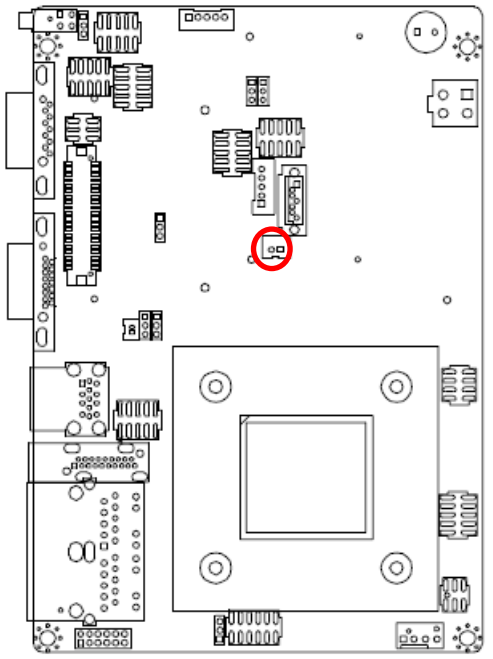

Signal	PIN
GND	1
+5V	2

3. BIOS Setup

3.1 Introduction

The BIOS setup program allows users to modify the basic system configuration. In this following chapter will describe how to access the BIOS setup program and the configuration options that may be changed.

3.2 Starting Setup

The AMI BIOS™ is immediately activated when you first power on the computer. The BIOS reads the system information contained in the NVRAM and begins the process of checking out the system and configuring it. When it finishes, the BIOS will seek an operating system on one of the disks and then launch and turn control over to the operating system.

While the BIOS is in control, the Setup program can be activated in one of two ways:
By pressing <Del> or <F2> immediately after switching the system on, or
By pressing the <Del> or <F2> key when the following message appears briefly at the left-top of the screen during the POST (Power On Self Test).

Press <Del> or <F2> to enter SETUP

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to.

Press F1 to Continue, DEL to enter SETUP

3.3 Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program using the keyboard.

Button	Description
↑	Move to previous item
↓	Move to next item
←	Move to the item in the left hand
→	Move to the item in the right hand
Esc key	Main Menu -- Quit and not save changes into NVRAM Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
+ key	Increase the numeric value or make changes
- key	Decrease the numeric value or make changes
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 key	Previous Values.
F3 key	Optimized defaults
F4 key	Save & Exit Setup

- **Navigating Through The Menu Bar**

  Use the left and right arrow keys to choose the menu you want to be in.

Note: Some of the navigation keys differ from one screen to another.

- **To Display a Sub Menu**

  Use the arrow keys to move the cursor to the sub menu you want. Then press <Enter>. A "➢" pointer marks all sub menus.

3.4 Getting Help

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc> or the F1 key again.

3.5 In Case of Problems

If, after making and saving system changes with Setup, you discover that your computer no longer is able to boot, the AMI BIOS supports an override to the NVRAM settings which resets your system to its defaults.

The best advice is to only alter settings which you thoroughly understand. To this end, we strongly recommend that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both BIOS Vendor and your systems manufacturer to provide the absolute maximum performance and reliability. Even a seemingly small change to the chipset setup has the potential for causing you to use the override.

3.6 BIOS setup

Once you enter the Aptio Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

3.6.1 Main Menu

This section allows you to record some basic hardware configurations in your computer and set the system clock.

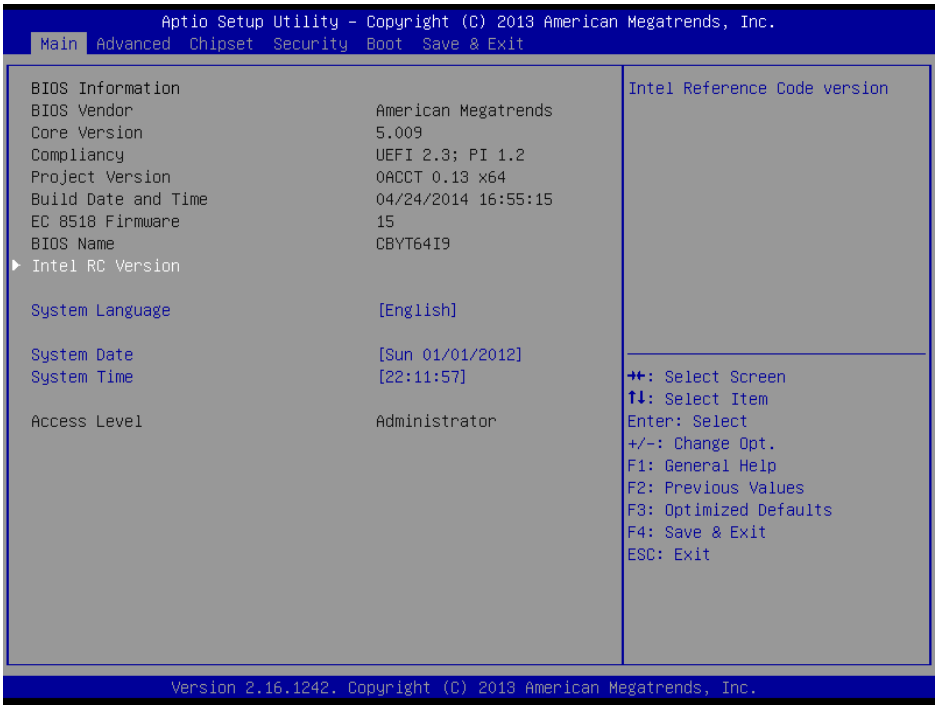
Aptio Setup Utility – Copyright (C) 2013 American Megatrends, Inc.
Main Advanced Chipset Security Boot Save & Exit
BIOS Information
BIOS Vendor American Megatrends
Core Version 5.009
Compliancy UEFI 2.3; PI 1.2
Project Version 0ACCT 0.13 x64
Build Date and Time 04/24/2014 16:55:15
EC 8518 Firmware 15
BIOS Name CBYT64I9
Intel RC Version
System Language [English]
System Date [Sun 01/01/2012]
System Time [22:11:57]
Access Level Administrator
Intel Reference Code version
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

3.6.1.1 System Language

This option allows choosing the system default language.

3.6.1.2 System Date

Use the system date option to set the system date. Manually enter the day, month and year.

3.6.1.3 System Time

Use the system time option to set the system time. Manually enter the hours, minutes and seconds.

Note: The BIOS setup screens shown in this chapter are for reference purposes only, and may not exactly match what you see on your screen.

Visit the Avalue website (www.avalue.com.tw) to download the latest

product and BIOS information.

3.6.2 Advanced Menu

This section allows you to configure your CPU and other system devices for basic operation through the following sub-menus.

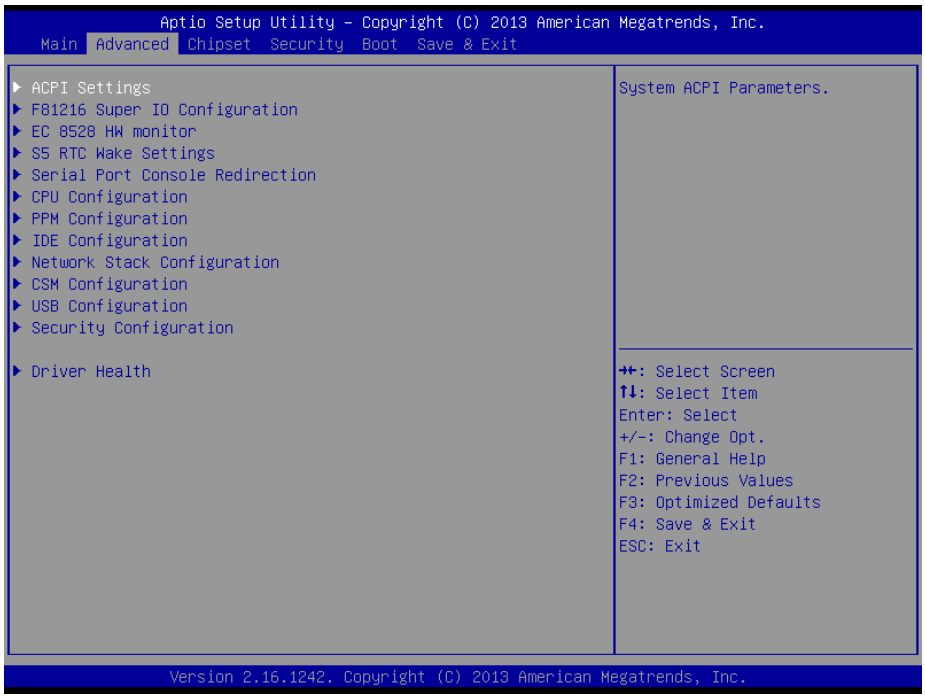

3.6.2.1 APCI Settings

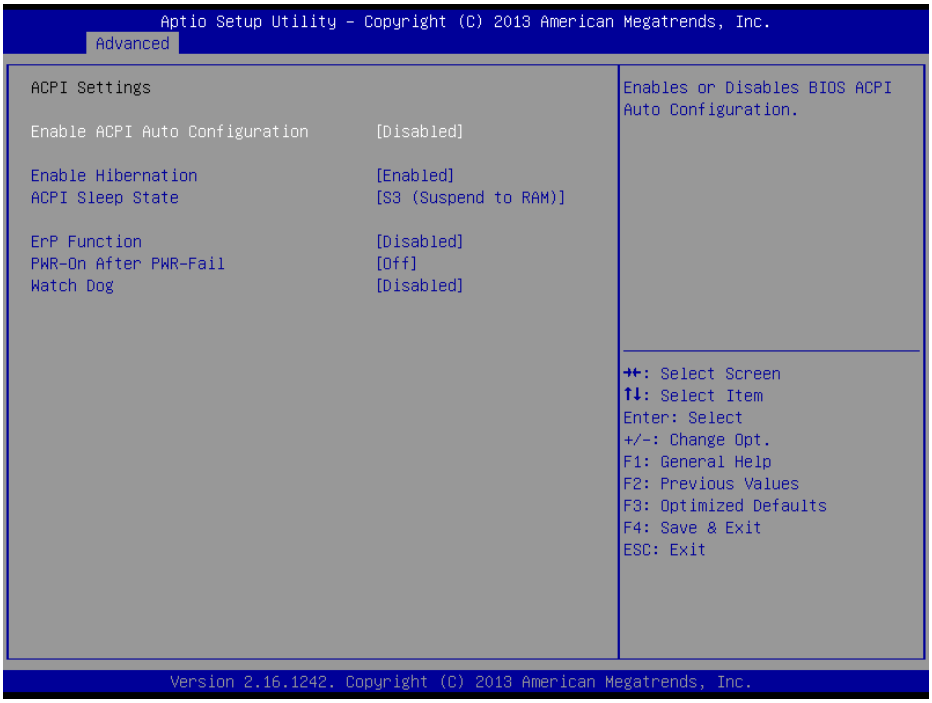
Aptio Setup Utility – Copyright (C) 2013 American Megatrends, Inc.
Advanced
ACPI Settings
Enable ACPI Auto Configuration [Disabled]
Enable Hibernation [Enabled]
ACPI Sleep State [S3 (Suspend to RAM)]
ErP Function [Disabled]
PWR-On After PWR-Fail [Off]
Watch Dog [Disabled]
Enables or Disables BIOS ACPI Auto Configuration.
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

Item	Options	Description
Enable ACPI Auto Configuration	Disabled**[Default]**, Enabled	Enables or Disables BIOS ACPI Auto Configuration.
Enable Hibernation	Disabled Enabled**[Default]**,	Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.
ACPI Sleep State	Suspend Disabled, S3 (Suspend to RAM) **[Default]**	Enables or Disables System ability to Sleep (OS/S3 Sleep State).
ErP Function	Disabled**[Default]**, Enabled	ErP Function (Deep S5).
PWR-On After PWR-Fail	Off**[Default]** On Last state	AC loss resume.
Watch Dog	Disabled**[Default]**, 30 sec 40 sec 50 sec 1 min 2 min 10 min 30 min	Select WatchDog.

3.6.2.2 F81216 Super IO Configuration

You can use this item to set up or change the F81216 Super IO configuration for serial ports. Please refer to 3.6.2.2.1, 3.6.2.2.2, 3.6.2.2.3 and 3.6.2.2.4 for more information.

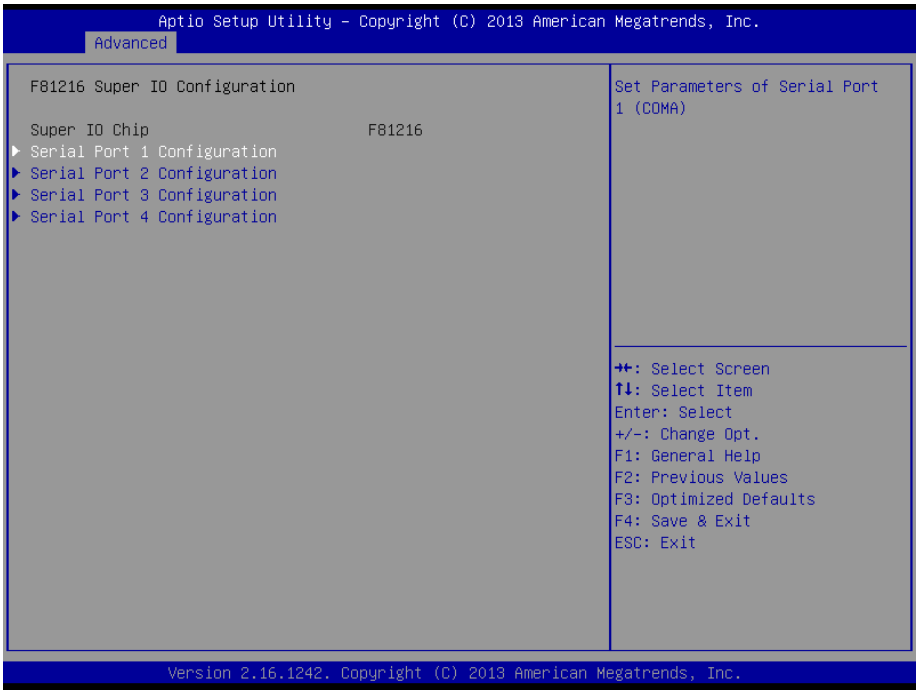
Aptio Setup Utility – Copyright (C) 2013 American Megatrends, Inc.
Advanced
F81216 Super IO Configuration
Super IO Chip F81216
Serial Port 1 Configuration
Serial Port 2 Configuration
Serial Port 3 Configuration
Serial Port 4 Configuration
Set Parameters of Serial Port 1 (COMA)
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

Item	Description
Serial Port 1 Configuration	Set Parameters of Serial Port 1 (COMA).
Serial Port 2 Configuration	Set Parameters of Serial Port 2 (COMB).
Serial Port 3 Configuration	Set Parameters of Serial Port 3 (COMC).
Serial Port 4 Configuration	Set Parameters of Serial Port 4 (COMD).

3.6.2.2.1 Serial Port 1 Configuration

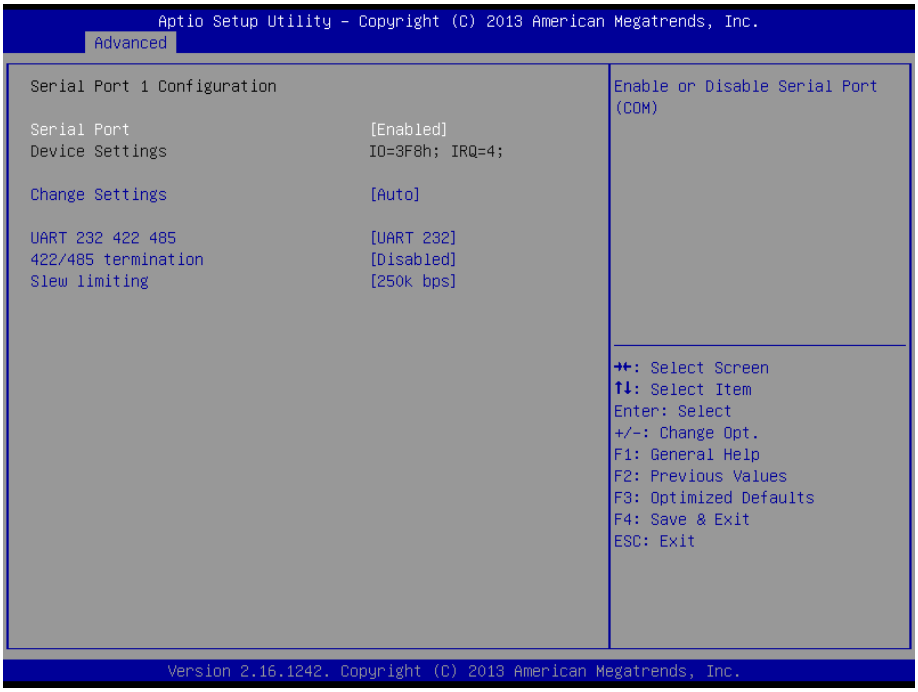

Item	Option	Description
Serial Port	Enabled**[Default]**, Disabled	Enable or Disable Serial Port (COM).
Change Settings	Auto**[Default]** IO=3F8h; IRQ=4; IO=3F8h; IRQ=3,4,5,6,7,10,11,12; IO=2F8h; IRQ=3,4,5,6,7,10,11,12; IO=3E8h; IRQ=3,4,5,6,7,10,11,12; IO=2E8h; IRQ=3,4,5,6,7,10,11,12;	Select an optimal setting for Super IO device.
UART 232 422 485	UART 232(LOOPBACK) UART 232**[Default]**, UART 485, UART 422	Change the Serial Port as RS232/ 422/ 485
422/485 termination	Enabled, Disabled**[Default]**	TERM from GPIO.
Slew limiting	10M bps 250k bps**[Default]**	SLEW from GPIO.

3.6.2.2.2 Serial Port 2 Configuration

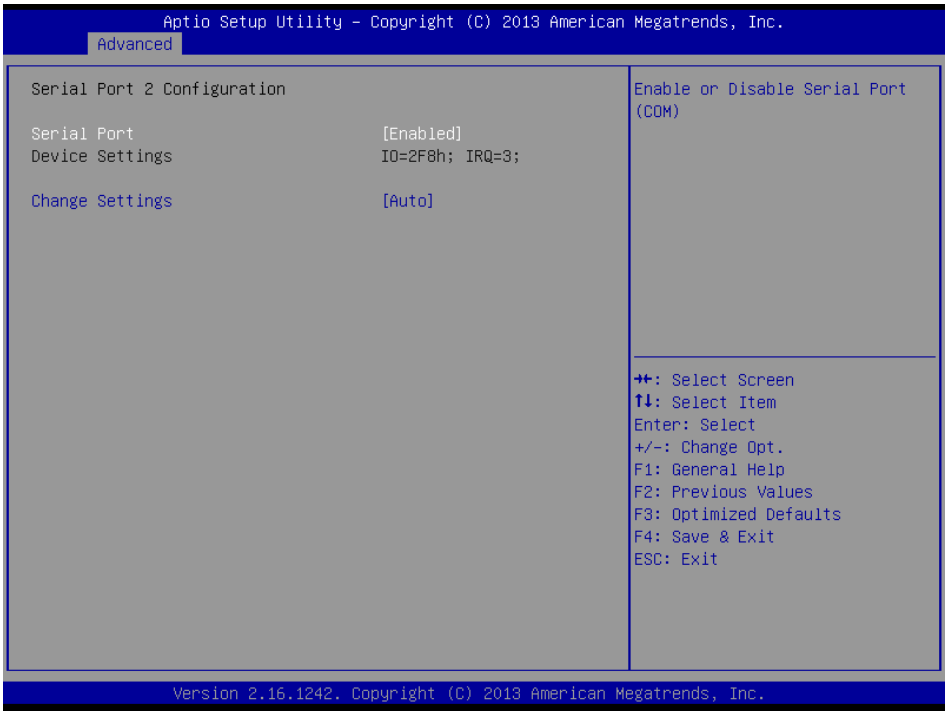

Item	Option	Description
Serial Port	Enabled**[Default]**, Disabled	Enable or Disable Serial Port (COM).
Change Settings	Auto**[Default]** IO=2F8h; IRQ=3; IO=3F8h; IRQ=3,4,5,6,7,10,11,12; IO=2F8h; IRQ=3,4,5,6,7,10,11,12; IO=3E8h; IRQ=3,4,5,6,7,10,11,12; IO=2E8h; IRQ=3,4,5,6,7,10,11,12;	Select an optimal setting for super IO device.

3.6.2.2.3 Serial Port 3 Configuration

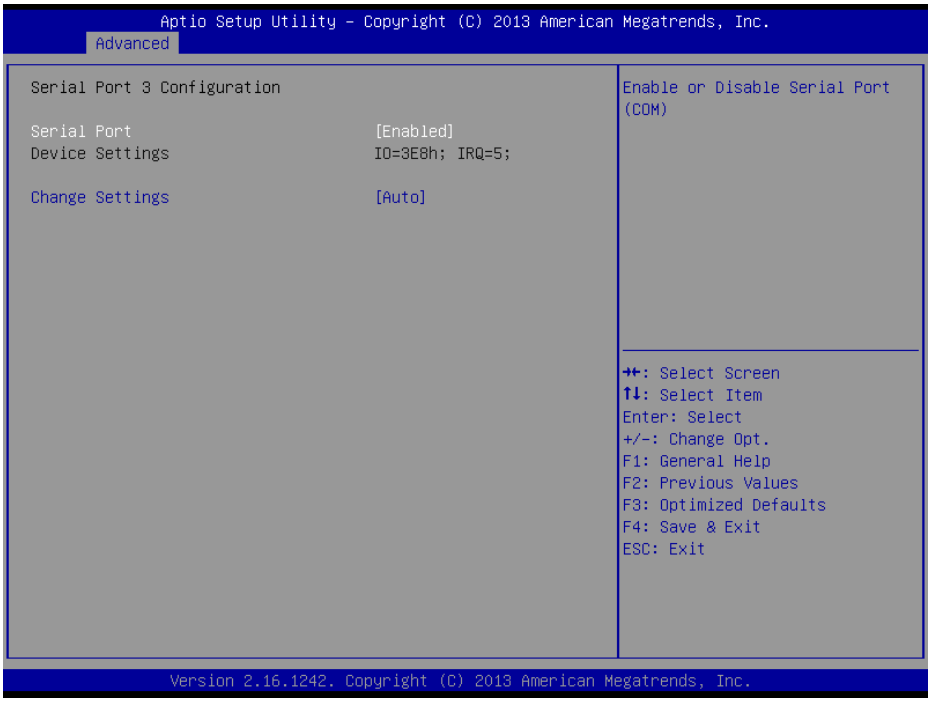

Item	Option	Description
Serial Port	Enabled**[Default]**, Disabled	Enable or Disable Serial Port (COM).
Change Settings	Auto**[Default]** IO=3E8h; IRQ=5; IO=3F8h; IRQ=3,4,5,6,7,10,11,12; IO=2F8h; IRQ=3,4,5,6,7,10,11,12; IO=3E8h; IRQ=3,4,5,6,7,10,11,12; IO=2E8h; IRQ=3,4,5,6,7,10,11,12;	Select an optimal setting for super IO device.

3.6.2.2.4 Serial Port 4 Configuration

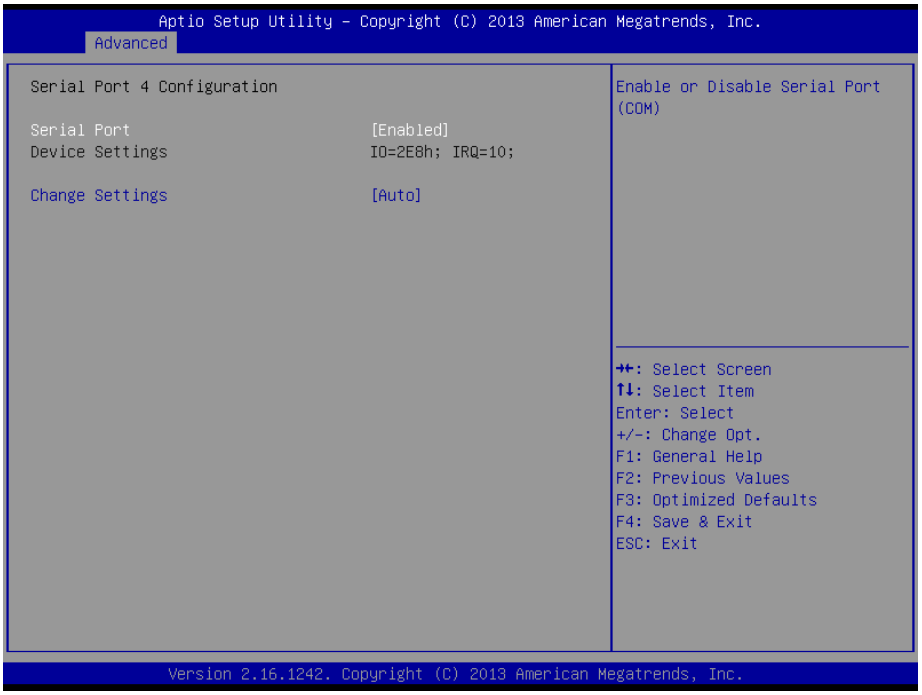

Item	Option	Description
Serial Port	Enabled**[Default]**, Disabled	Enable or Disable Serial Port (COM).
Change Settings	Auto**[Default]** IO=2E8h; IRQ=10; IO=3F8h; IRQ=3,4,5,6,7,10,11,12; IO=2F8h; IRQ=3,4,5,6,7,10,11,12; IO=3E8h; IRQ=3,4,5,6,7,10,11,12; IO=2E8h; IRQ=3,4,5,6,7,10,11,12;	Select an optimal setting for super IO device.

3.6.2.3 H/W Monitor

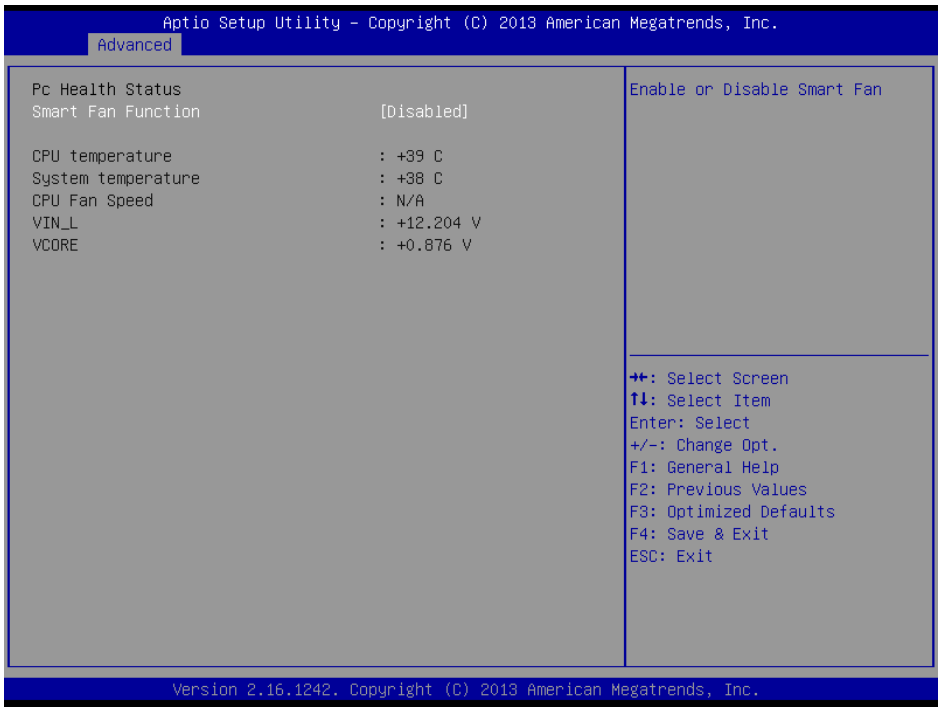
Aptio Setup Utility – Copyright (C) 2013 American Megatrends, Inc.
Advanced
Pc Health Status
Smart Fan Function [Disabled]
CPU temperature : +39 C
System temperature : +38 C
CPU Fan Speed : N/A
VIN_L : +12.204 V
VCORE : +0.876 V
Enable or Disable Smart Fan
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

Item	Options	Description
Smart Fan Function	Enabled, Disabled**[Default]**	Enables or Disables Smart Fan.

3.6.2.4 S5 RTC Wake Settings

Aptio Setup Utility – Copyright (C) 2013 American Megatrends, Inc.
Advanced
Wake system from S5 [Disabled]
Enable or disable System wake on alarm event. Select FixedTime, system will wake on the hr::min::sec specified. Select DynamicTime , System will wake on the current time + Increase minute(s)
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

Item	Options	Description
Wake system from S5	Disabled**[Default]**, Enabled	Enable or disable System wake on alarm event. Select Fixed Time, system will wake on the hr::min::sec specified. Select Dynamic Time, System will wake on the current time + Increase minute(s).

3.6.2.5 Serial Port Console Redirection

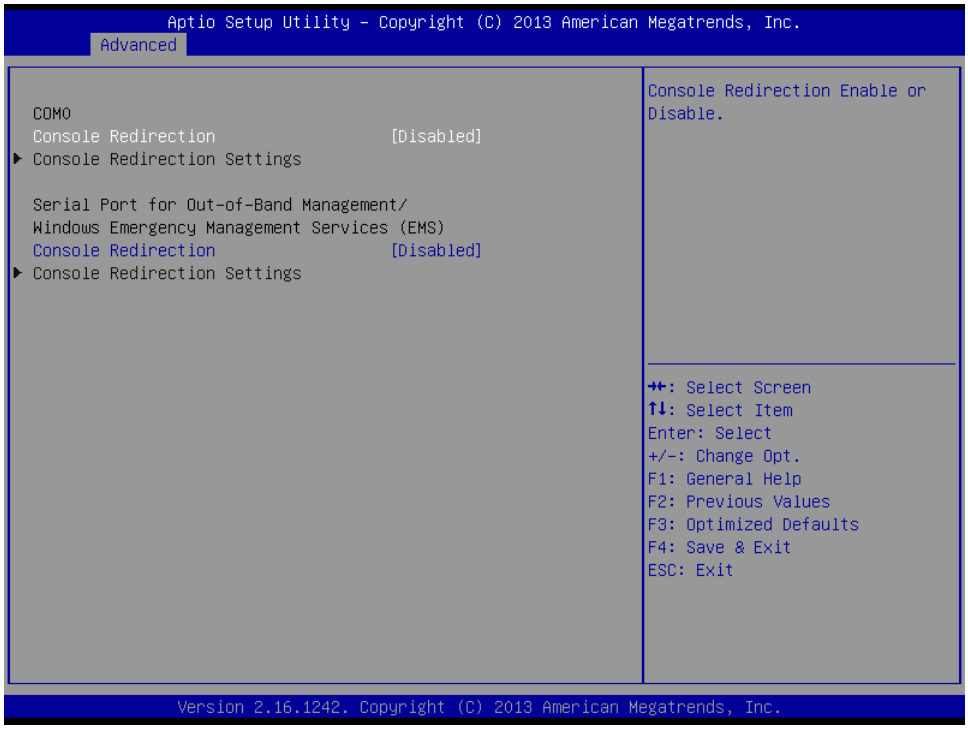

Item	Options	Description
Console Redirection	Disabled**[Default]**, Enabled	Console Redirection Enable or Disable.

3.6.2.6 CPU Configuration

Use the CPU configuration menu to view detailed CPU specification and configure the CPU.

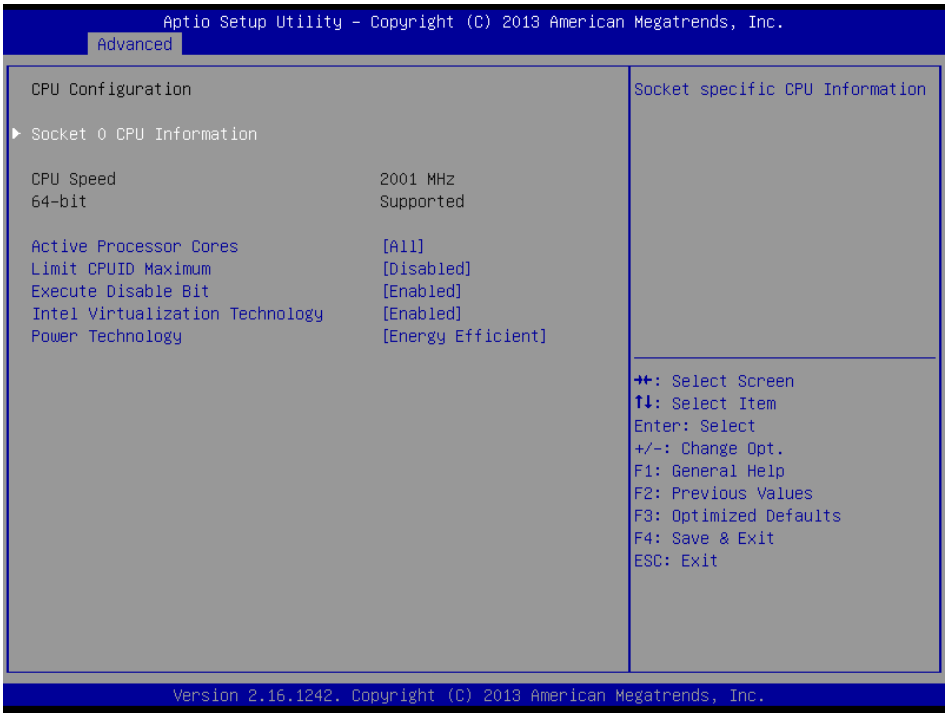

Item	Options	Description
Active Processor Cores	All**[Default]**, 1	Number of cores to enable in each processor package.
Limit CPUID Maximum	Disabled**[Default]**, Enabled	Disabled for Windows XP.
Execute Disable Bit	Disabled, Enabled**[Default]**	XD can prevent certain classes of malicious buffer overflow attacks when combined with a supporting OS (Windows Server 2003 SP1, Windows XP SP2, SuSE Linux 9.2, RedHat Enterprise 3 Update 3.)
Intel Virtualization Technology	Disabled, Enabled**[Default]**	When enabled, a VMM can utilize the additional hardware capabilities provided by Virtualization Technology.
Power Technology	Disabled, Energy Efficient**[Default]** Custom	Enable the power management features.

3.6.2.6.1 Socket 0 CPU Information

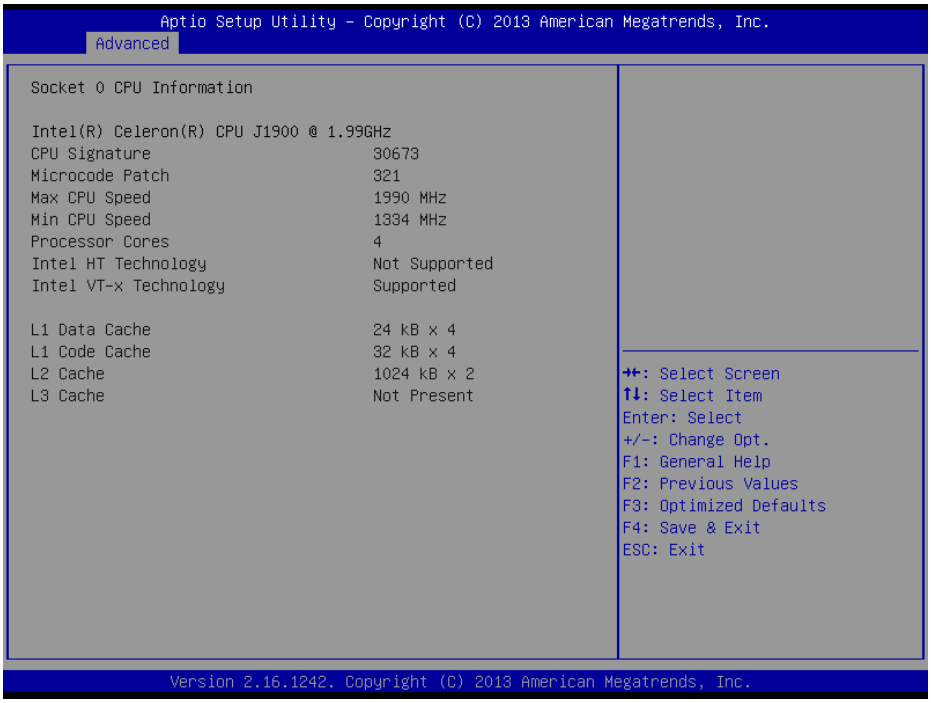
Aptio Setup Utility – Copyright (C) 2013 American Megatrends, Inc.
Advanced
Socket 0 CPU Information
Intel(R) Celeron(R) CPU J1900 @ 1.99GHz
CPU Signature 30673
Microcode Patch 321
Max CPU Speed 1990 MHz
Min CPU Speed 1334 MHz
Processor Cores 4
Intel HT Technology Not Supported
Intel VT-x Technology Supported
L1 Data Cache 24 kB x 4
L1 Code Cache 32 kB x 4
L2 Cache 1024 kB x 2
L3 Cache Not Present
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

3.6.2.7 PPM Configuration

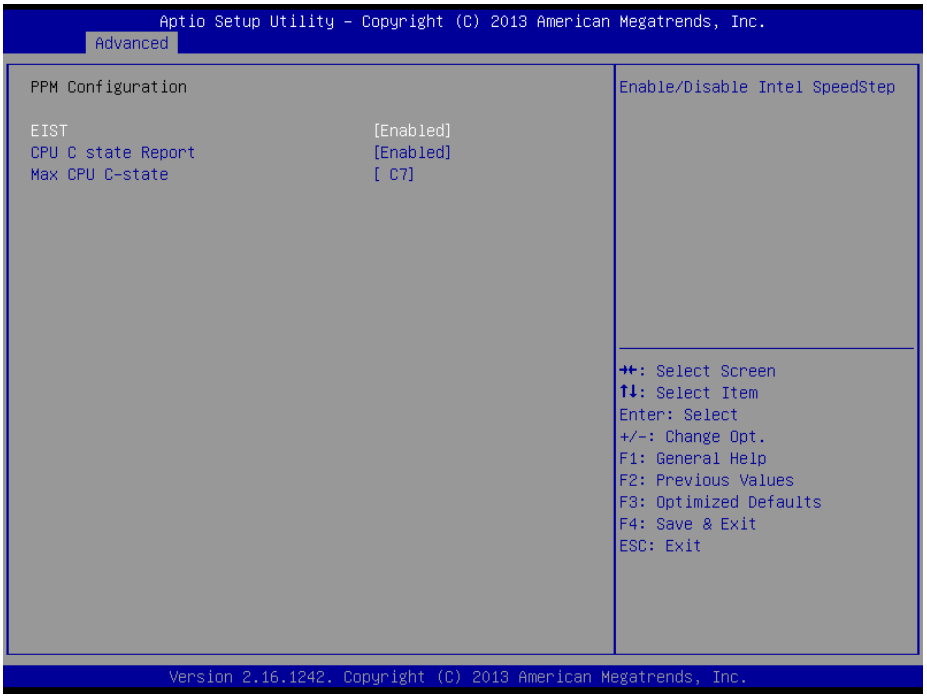

Item	Options	Description
EIST	Disabled, Enabled**[Default]**	Enable/Disable Intel SpeedStep.
CPU C state Report	Disabled, Enabled**[Default]**	Enable/Disable CPU C state report to OS.

Max CPU C-state	C1/C6/C7**[Default]**	This option controls Max C state that the processor will support.

3.6.2.8 IDE Configuration

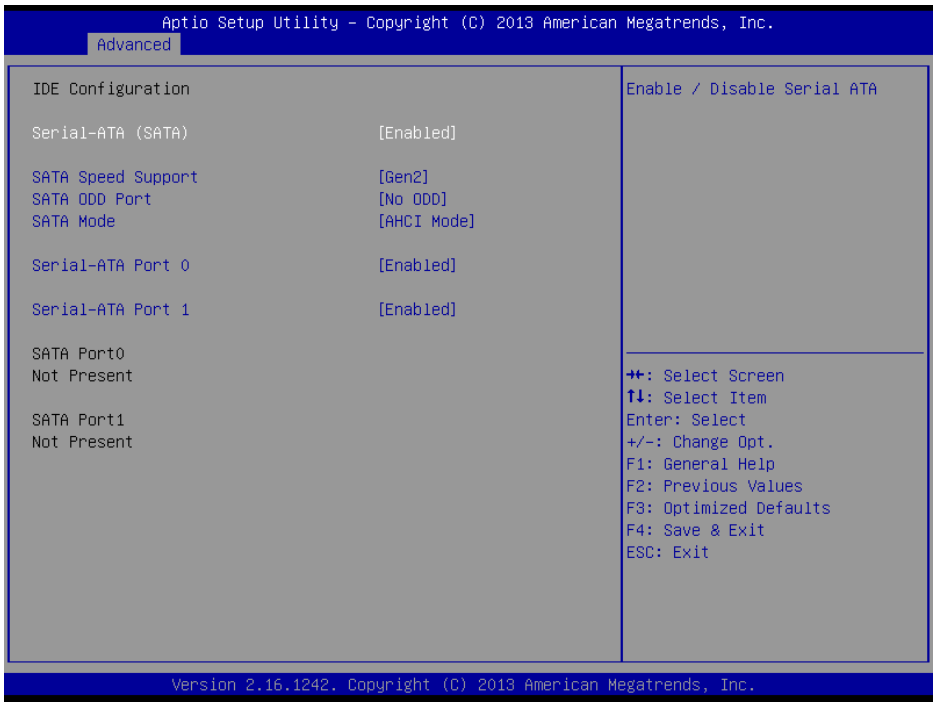

Item	Options	Description
Serial-ATA (SATA)	Enabled**[Default]** Disabled,	Enable/Disable Serial ATA.
SATA Speed Support	Gen1 Gen2**[Default]**	SATA Speed Support.
SATA ODD Port	Port0 ODD Port1 ODD No ODD**[Default]**	SATA ODD is Port0 or Port1.
SATA Mode	IDE Mode AHCI Mode**[Default]**	Select IDE/AHCI.
Serial-ATA Port 0/1	Enabled**[Default]** Disabled,	Enable/Disable Serial ATA Port0/1.

3.6.2.9 Network Stack Configuration

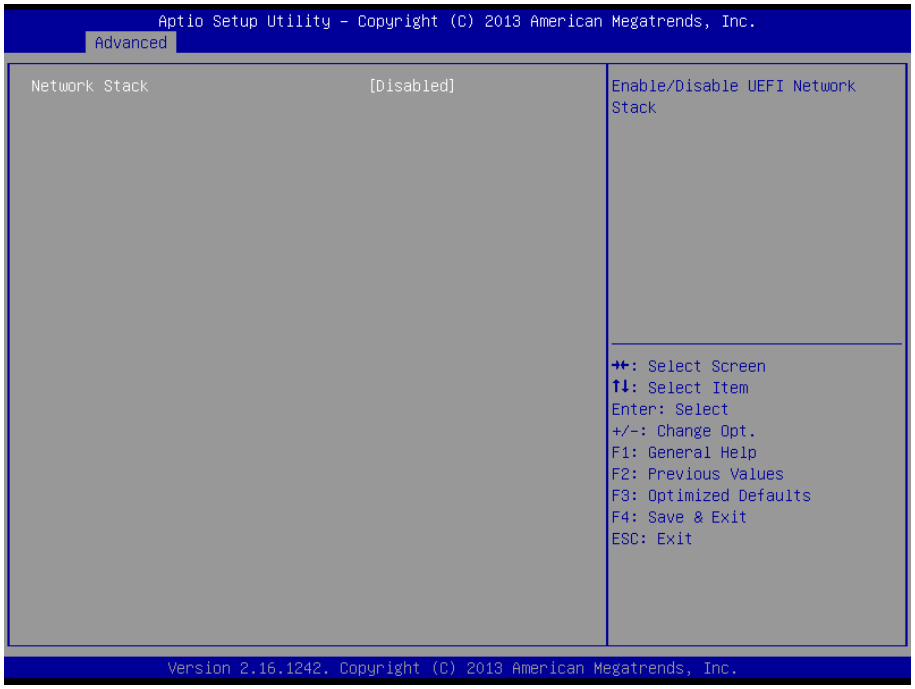

Item	Options	Description
Network Stack	Enabled Disabled**[Default]**	Enable/Disable UEFI Network Stack.

3.6.2.10 CSM Configuration

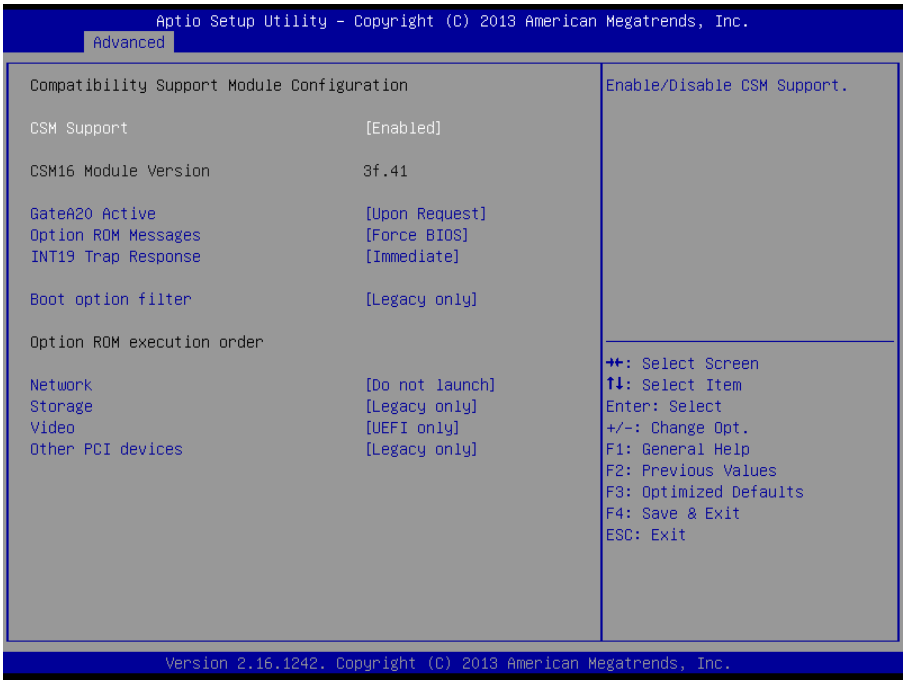

Item	Options	Description
CSM Support	Enabled**[Default]** Disabled,	Enable/Disable CSM Support.

GateA20 Active	Upon Request**[Default]** Always	UPON REQUEST – GA20 can be disabled using BIOS services. ALWAYS – go not allow disabling GA20; this option is useful when any RT code is executed above 1MB.
Option ROM Messages	Force BIOS**[Default]** Keep Current	Set display mode for Option ROM.
INT19 Trap Response	Immediate**[Default]** Postponed	BIOS reaction on INT19 trapping by Option ROM: IMMEDIATE – execute the trap right away; POSTPONED – execute the traps during legacy boot.
Boot option filter	UEFI and Legacy Legacy only**[Default]** UEFI only	This option controls Legacy/UEFI ROMs priority.
Network	Do not launch**[Default]** UEFI only Legacy only	Controls the execution of UEFI and Legacy PXE OpROM.
Storage	Do not launch UEFI only Legacy only**[Default]**	Controls the execution of UEFI and Legacy Storage OpROM.
Video	Do not launch UEFI only Legacy only**[Default]**	Controls the execution of UEFI and Legacy Video OpROM.
Other PCI devices	UEFI only Legacy only**[Default]**,	Determines OpROM execution policy for devices other than Network, Storage, or Video.

3.6.2.11 USB Configuration

The USB Configuration menu helps read USB information and configures USB settings.

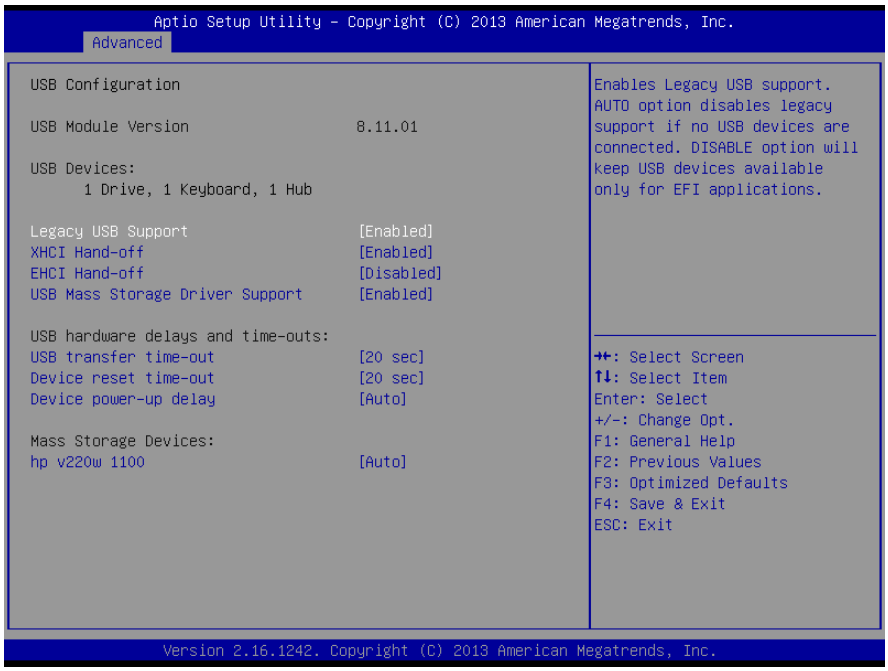
Aptio Setup Utility – Copyright (C) 2013 American Megatrends, Inc.
Advanced
USB Configuration
USB Module Version 8.11.01
USB Devices:
1 Drive, 1 Keyboard, 1 Hub
Legacy USB Support [Enabled]
XHCI Hand-off [Enabled]
EHCI Hand-off [Disabled]
USB Mass Storage Driver Support [Enabled]
USB hardware delays and time-outs:
USB transfer time-out [20 sec]
Device reset time-out [20 sec]
Device power-up delay [Auto]
Mass Storage Devices:
hp v220w 1100 [Auto]
Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

Item	Options	Description
Legacy USB Support	Enabled**[Default]** Disabled Auto	Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.
XHCI Hand-off	Enabled**[Default]** Disabled	This is a workaround for OSew without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
EHCI Hand-off	Enabled Disabled**[Default]**	This is a workaround for OSes without EHCI hand-off support. The EHCI ownership change should be claimed by EHCI driver.
USB Mass Storage Driver Support	Enabled**[Default]** Disabled	Enable/Disable USB Mass Storage Driver Support.
USB transfer time-out	1 sec 5 sec 10 sec 20 sec**[Default]**	The time-out value for Control, Bulk, and Interrupt transfers.
Device reset time-out	10 sec 20 sec**[Default]** 30 sec 40 sec	USB mass storage device Start Unit command time-out.
Device power-up delay	Auto**[Default]** Manual	Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken form Hub descriptor.

3.6.2.12 Security Configuration

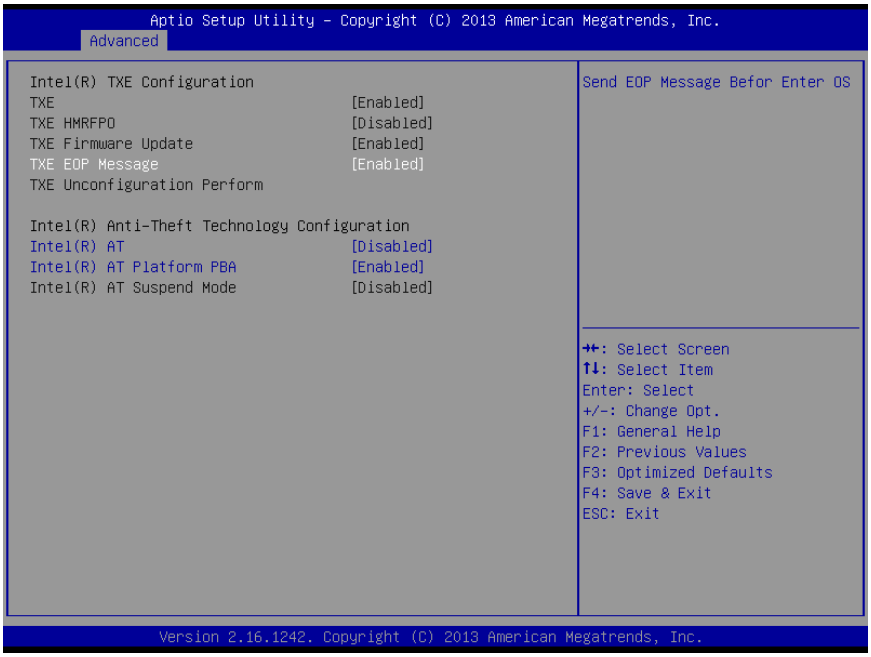

Item	Options	Description
TXE EOP Message	Disabled Enabled**[Default]**,	Send EOP Message Before Enter OS.

Intel® AT	Disabled Enabled**[Default]**,	Enable/Disable BIOS AT Code from Running.
Inter® AT Platform PBA	Disabled**[Default]**, Enabled	Enable/Disable BIOS AT Code from Running.

3.6.2.13 Lan driver report status

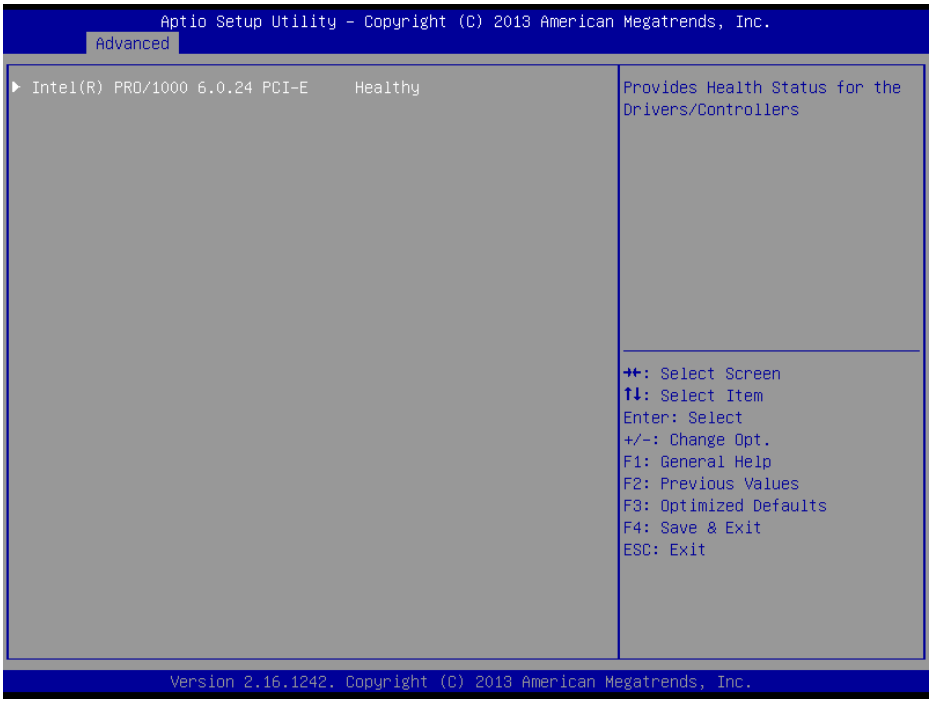
Aptio Setup Utility – Copyright (C) 2013 American Megatrends, Inc.
Advanced
Intel(R) PRO/1000 6.0.24 PCI-E Healthy
Provides Health Status for the Drivers/Controllers
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

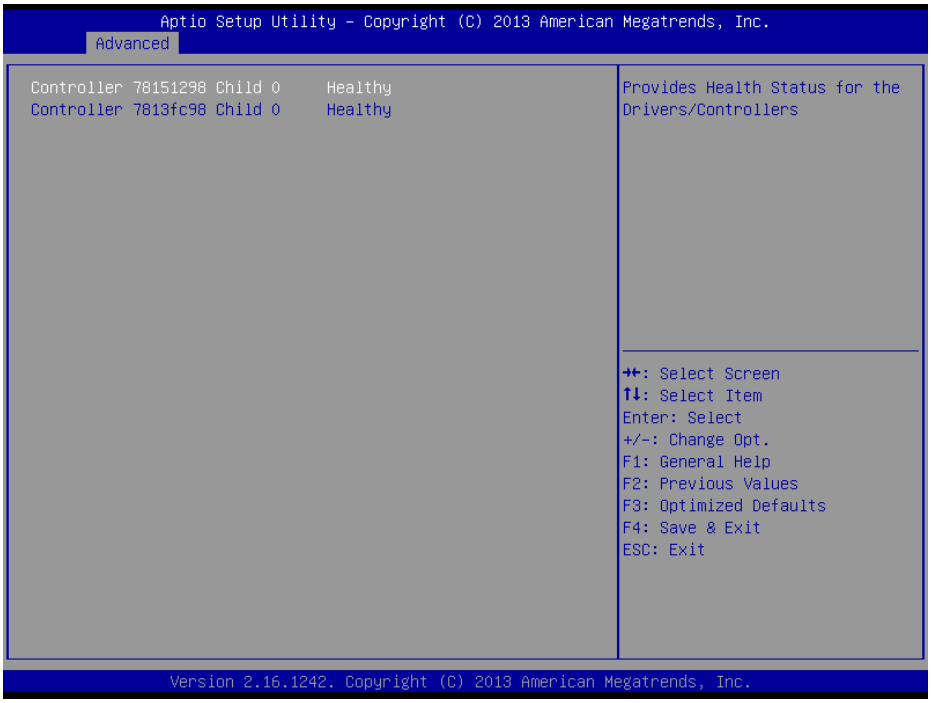
Aptio Setup Utility – Copyright (C) 2013 American Megatrends, Inc.
Advanced
Controller 78151298 Child 0 Healthy
Controller 7813fc98 Child 0 Healthy
Provides Health Status for the Drivers/Controllers
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

3.6.3 Chipset

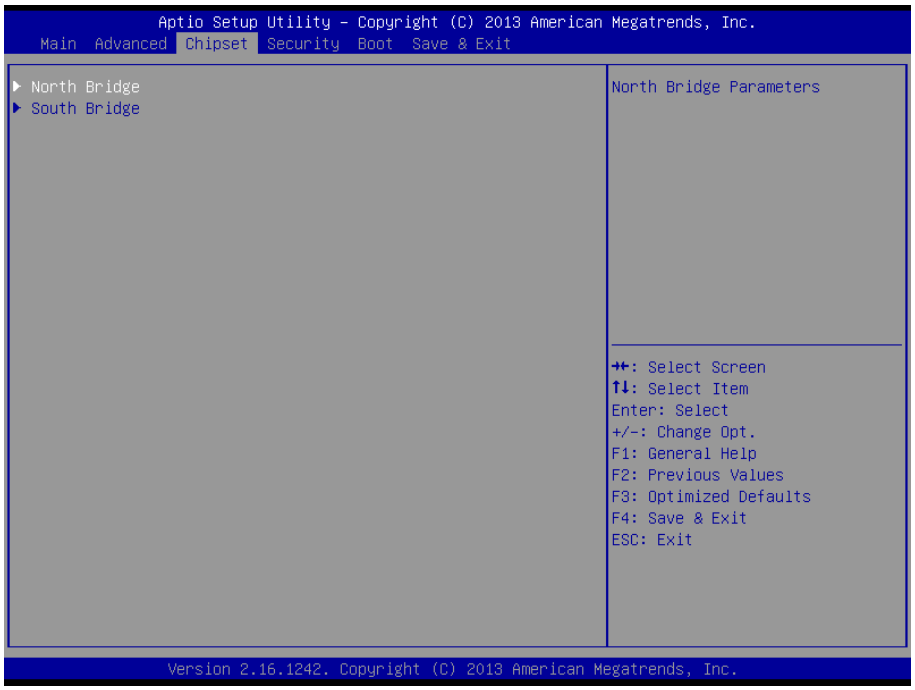

3.6.3.1 North Bridge

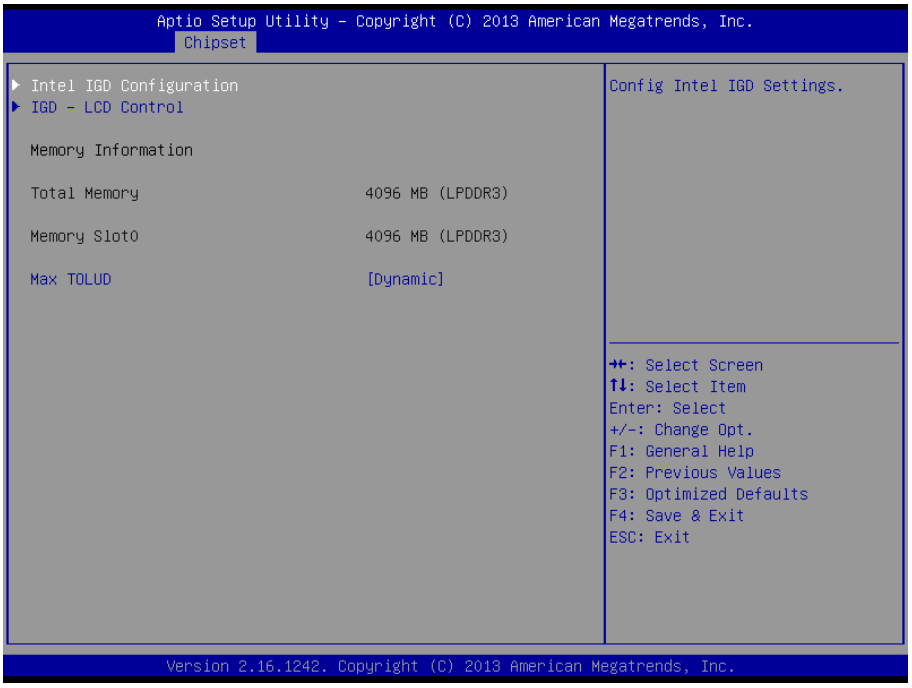

Item	Option	Description
Max TOLUD	Dynamic**[Default]** 2 GB 2.25 GB 2.5 GB 2.75 GB 3 GB	Maximum Value of TOLUD.

3.6.3.1.1 Intel IGD Configuration

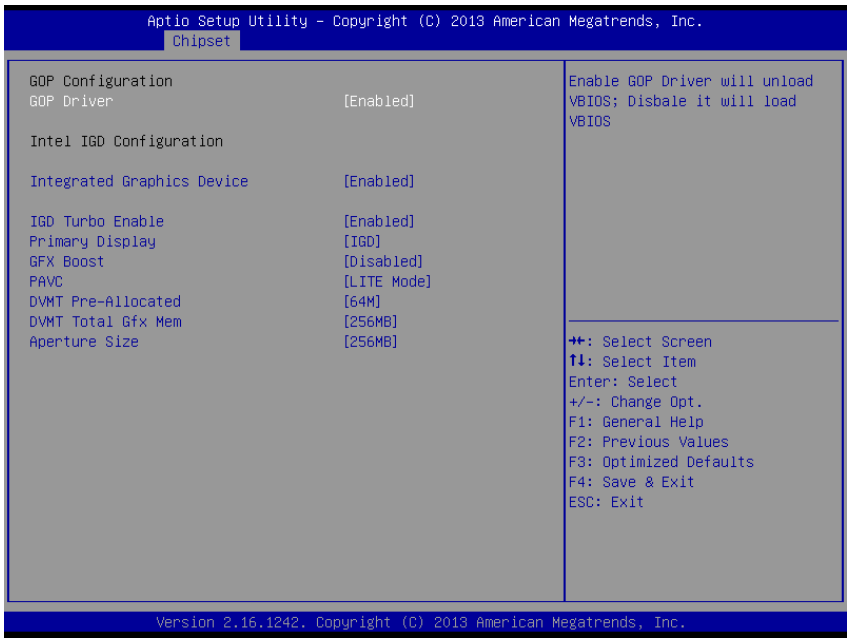

Item	Option	Description
GOP Driver	Enabled**[Default]**, Disabled	Enable GOP Driver will unload VBIOS; Disable it will load VBIOS.
Integrated Graphics Device	Enabled**[Default]**, Disabled	Enable: Enable Integrated Graphics Device (IGD) when selected as the Primary Video Adaptor. Disable: Always disable IGD.
IGD Turbo Enable	Enabled**[Default]**, Disabled	Enable: Enable IGD Turbo Enable. Disable: IGD Turbo Disable.
Primary Display	Auto IGD**[Default]** PCIe	Select which of IGD/PCI Graphics device should be Primary Display.
GFX Boost	Enabled, Disabled**[Default]**	Enable/Disable GFX Boost.
PAVC	Disabled LITE Mode**[Default]** SERPENT Mode	Enable/Disable Protected Audio Video Control.
DVMT Pre-Allocated	64M**[Default]**/96M128M/160M/192M/ 224M/256M/288M/320M/352M/ 384M/416M/448M/ 480M/512M	Select DVMT 5.0 Pre-Allocated (Fixed) Graphics Memory size used by the Internal Graphics Device.
DVMT Total Gfx Mem	128MB 256MB**[Default]** Max	Select DVMT 5.0 Total Graphics Memory size used by the Internal Graphics Device.
Aperture Size	128MB 256MB**[Default]**	Select the Aperture Size.

3.6.3.1.2 IGD - LCD Control

Aptio Setup Utility – Copyright (C) 2013 American Megatrends, Inc.
Chipset
IGD – LCD Control
LVDS Back Light PWM Frequency [200]
Active LVDS(Ch7511) [Enabled]
CH7511 EDID Panel Option [1024x768 24/1]
LVDS Back Light PWM [100%]
Select LVDS back light PWM Frequency.
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

Item	Option	Description
LVDS Back Light PWM Frequency	200**[Default]** 300 400 500 700 1k 2k 3k 5k	Select LVDS back light PWM Frequency.
Active LVDS (Ch7511)	Enabled**[Default]** Disabled	Active Internal LVDS(eDP->Ch7511-to –LVDS).
CH7511 EDID Panel Option	1024x768 24/1**[Default]** 800x600 18/1 1024x768 18/1 1366x768 18/1 1024x600 18/1 1280x800 18/1 1920x1200 24/2 640x480 18/1 800x480 18/1 1920x1080 18/2 1280x1024 24/2 1440x900 18/2 1600x1200 24/2 1366x768 24/1 1920x1080 24/2 1680x1050 24/2	Port1-EDP to LVDS (Chrotel 7511) Panel EDID Option.
LVDS Back Light PWM	00% 25%	Select LVDS back light PWM duty.

	50% 75% 100%**[Default]**	

3.6.3.2 South Bridge

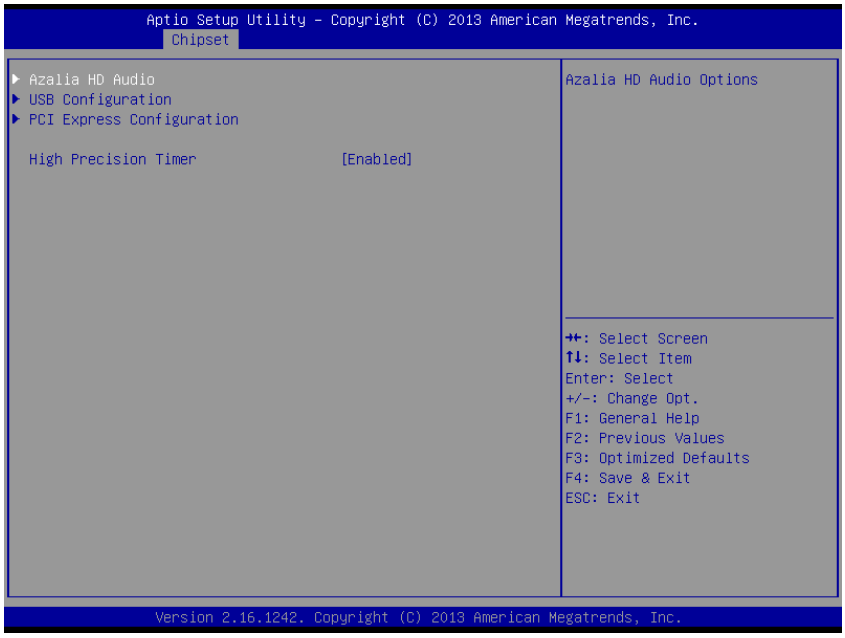

Item	Option	Description
High Precision Timer	Disabled Enabled**[Default]**	Enable or Disable the High Precision Event Timer.

3.6.3.2.1 Azalia HD Audio

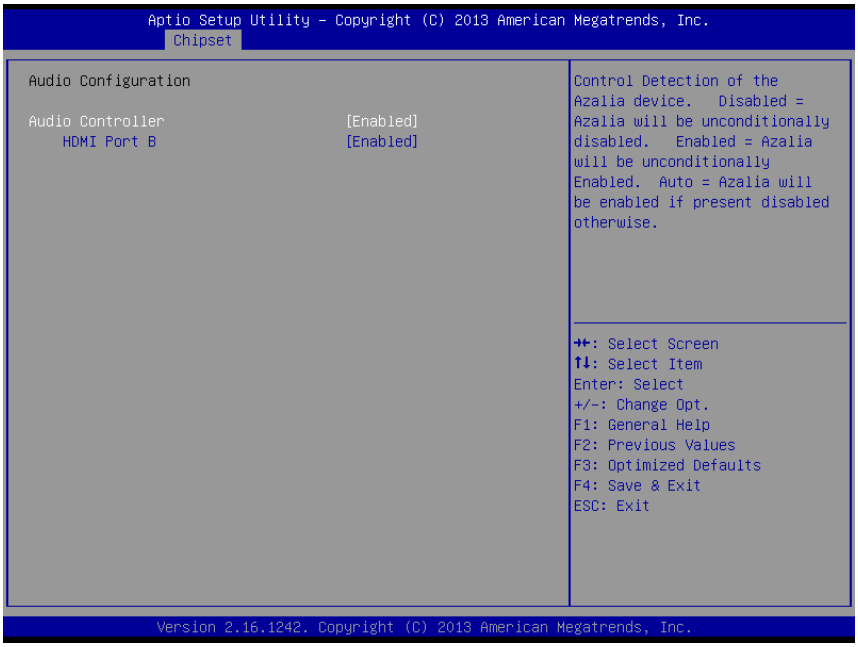
Aptio Setup Utility – Copyright (C) 2013 American Megatrends, Inc.
Chipset
Audio Configuration
Audio Controller [Enabled]
HDMI Port B [Enabled]
Control Detection of the Azalia device. Disabled = Azalia will be unconditionally disabled. Enabled = Azalia will be unconditionally Enabled. Auto = Azalia will be enabled if present disabled otherwise.
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

Item	Option	Description
Audio Controller	Enabled**[Default]**, Disabled	Control Detection of the Azalia device. Disabled = Azalia will be unconditionally disabled. Enabled = Azalia will be unconditionally Enabled. Auto = Azalia will be enabled if present disabled otherwise.
HDMI Port B	Enabled**[Default]**, Disabled	Enable/Disable HDMI Port B.

3.6.3.2.2 USB Configuration

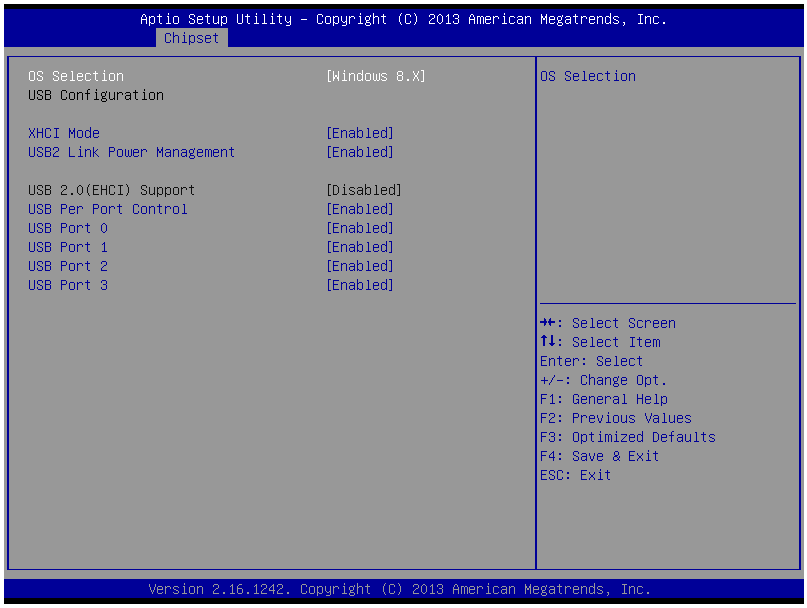

Item	Option	Description
OS Selection	Windows 8.X**[Default]** Android Windows 7	Please select the corresponding type of Windows for OS installation. Please change the item of OS selection to Windows 7 if you intend to install Windows 7 OS; Please change the item of OS selection to Windows 8.X if you intend to install Windows 8 OS.
XHCI Mode	Enabled**[Default]**, Disabled	Control the USB XHCI (USB 3.0) functions & HSIC function.
USB 2.0 (EHCI) Support	Enabled, Disabled**[Default]**	Control the USB EHCI (USB2.0) functions.
USB Per Port Control	Enabled**[Default]**, Disabled	Control each of the USB ports (0~3). Enable: Enable USB per port; Disable: Use USB port X settings.
USB Port 0/1/2/3	Enabled**[Default]**, Disabled	Enable/Disable USB Port 0/1/2/3

3.6.3.2.3 PCI Express Configuration

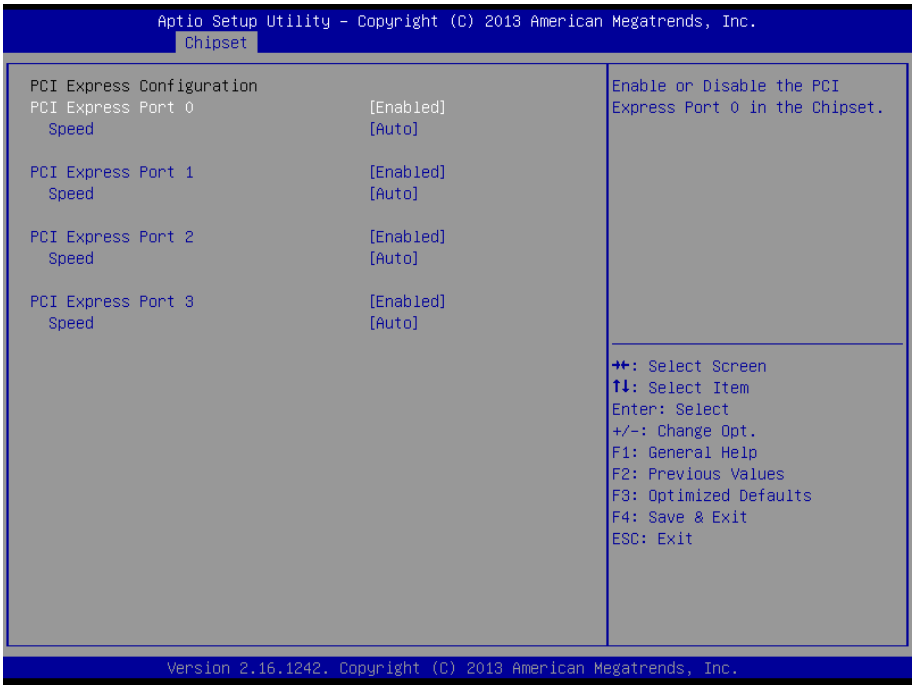
Aptio Setup Utility – Copyright (C) 2013 American Megatrends, Inc.
Chipset
PCI Express Configuration
PCI Express Port 0 [Enabled]
Speed [Auto]
PCI Express Port 1 [Enabled]
Speed [Auto]
PCI Express Port 2 [Enabled]
Speed [Auto]
PCI Express Port 3 [Enabled]
Speed [Auto]
Enable or Disable the PCI Express Port 0 in the Chipset.
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

Item	Option	Description
PCI Express Port 0/1/2/3	Enabled**[Default]**, Disabled	Enable or Disable the PCI Express Port 0/1/2/3 in the Chipset.
Speed	Auto**[Default]** Gen 2 Gen 1	Configure PCIe Port Speed.

3.6.4 Security

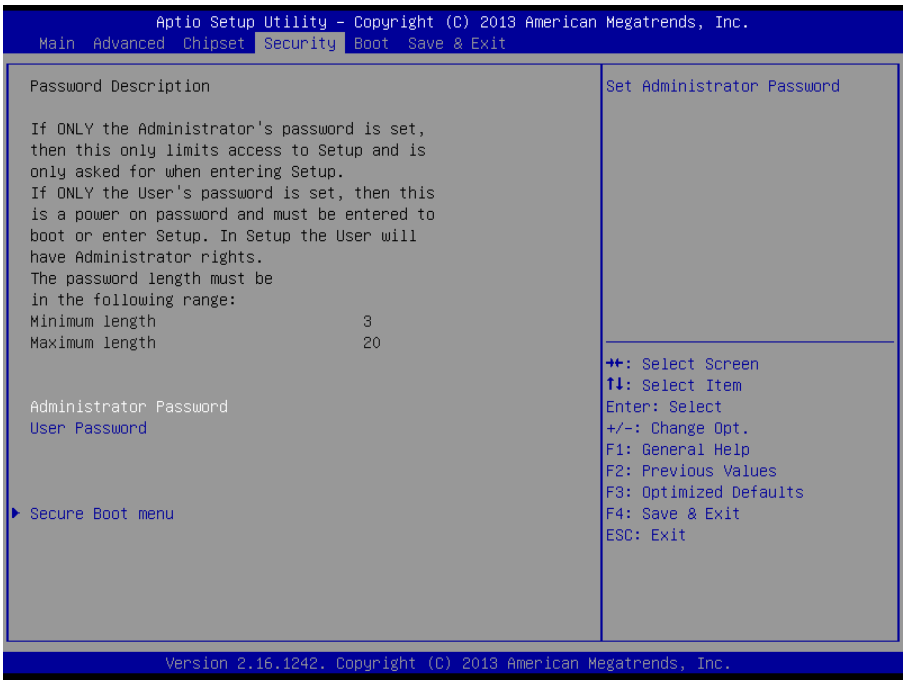
Aptio Setup Utility – Copyright (C) 2013 American Megatrends, Inc.
Main Advanced Chipset Security Boot Save & Exit
Password Description
If ONLY the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup.
If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User will have Administrator rights.
The password length must be in the following range:
Minimum length 3
Maximum length 20
Administrator Password
User Password
Secure Boot menu
Set Administrator Password
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

- **Administrator Password**

Set setup Administrator Password

- **User Password**

Set User Password

3.6.5 Boot

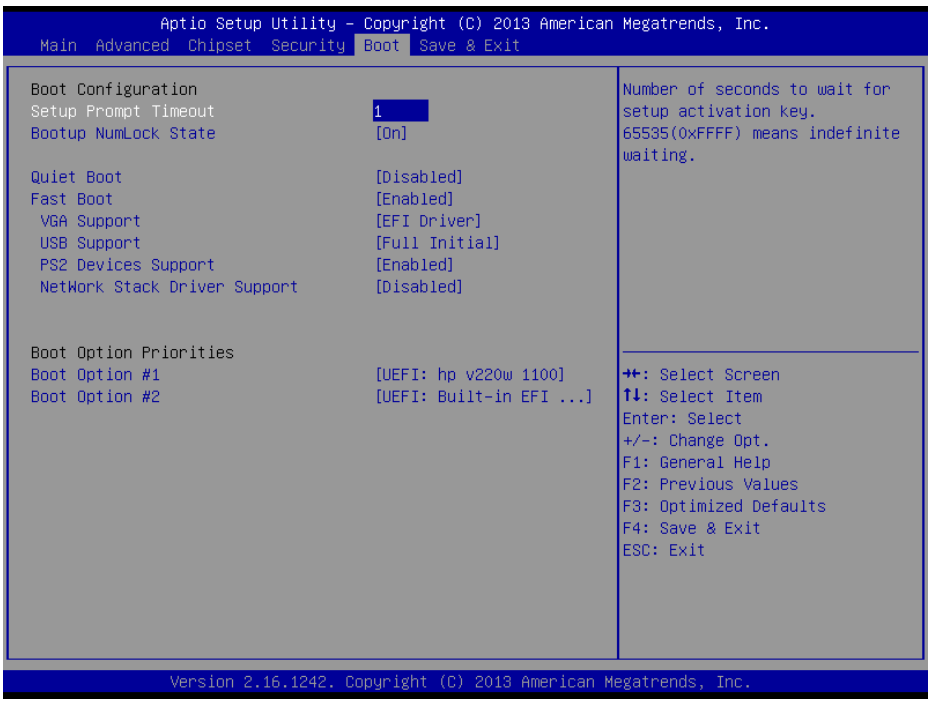

Item	Option	Description
Setup Prompt Timeout	1~ 65535	Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.
Bootup NumLock State	On**[Default]** Off	Select the Keyboard NumLock state
Quiet Boot	Disabled**[Default]** Enabled	Enables or disables Quiet Boot option
Fast Boot	Disabled**[Default]** Enabled	Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.
VGA Support	Auto EFI Driver**[Default]**	Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.
USB Support	Disabled Full Initial Partial Initial**[Default]**	If Disabled, all USB devices will NOT be available until after OS boot. If Partial Initial, USB Mass Storage and specific

		USB port/device will NOT be available before OS boot. If Enabled, all USB devices will be available in OS and Post.
PS2 Devices Support	Disabled Enabled**[Default]**	If Disabled, PS2 devices will be skipped.
NetWork Stack Driver Support	Disabled**[Default]** Enabled	If Disabled, NetWork Stack Driver will be skipped.
Boot Option #1	Set the system boot order.	

3.6.6 Save and exit

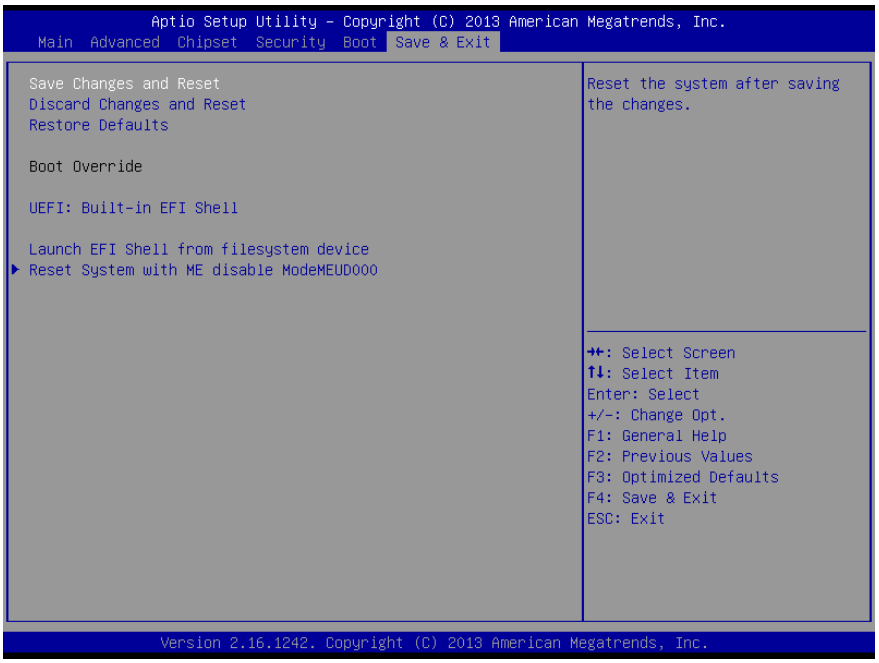
Aptio Setup Utility – Copyright (C) 2013 American Megatrends, Inc.
Main Advanced Chipset Security Boot Save & Exit
Save Changes and Reset
Discard Changes and Reset
Restore Defaults
Boot Override
UEFI: Built-in EFI Shell
Launch EFI Shell from filesystem device
Reset System with ME disable ModeMEUD000
Reset the system after saving the changes.
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

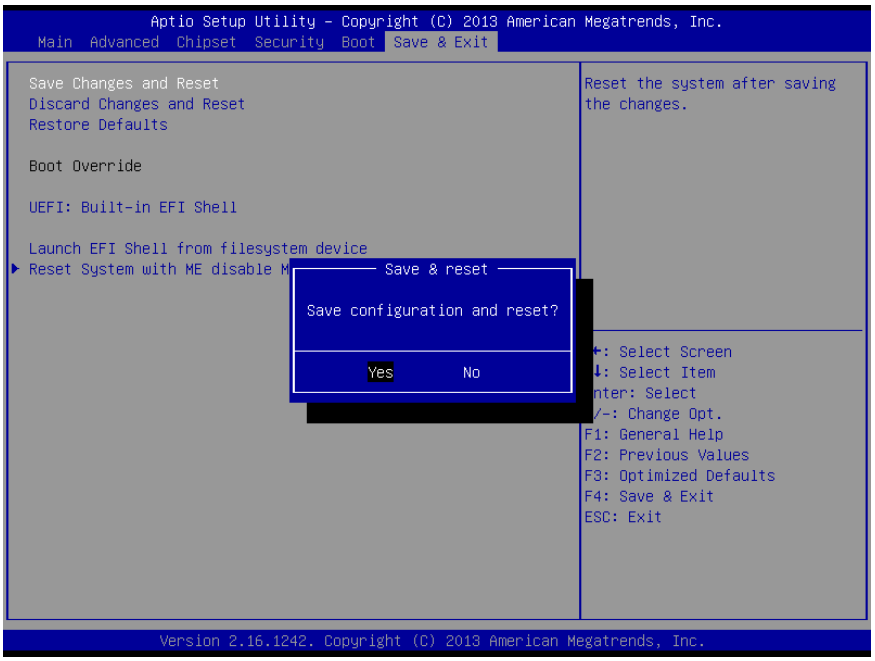
Aptio Setup Utility – Copyright (C) 2013 American Megatrends, Inc.
Main Advanced Chipset Security Boot Save & Exit
Save Changes and Reset
Discard Changes and Reset
Restore Defaults
Boot Override
UEFI: Built-in EFI Shell
Launch EFI Shell from filesystem device
Save & reset
Save configuration and reset?
Yes
No
Reset the system after saving the changes.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

3.6.6.1 Save Changes and Reset

Reset the system after saving the changes.

3.6.6.2 Discard Changes and Reset

Any changes made to BIOS settings during this session of the BIOS setup program are discarded. The setup program then exits and reboots the controller.

3.6.6.3 Restore Defaults

This option restores all BIOS settings to the factory default. This option is useful if the controller exhibits unpredictable behavior due to an incorrect or inappropriate BIOS setting.

3.6.6.4 Launch EFI Shell from filesystem device

Attempts to Launch EFI Shell application (Shellx64.efi) from one of the available filesystem devices.

4. Drivers Installation

Note: Installation procedures and screen shots in this section are for your reference and may not be exactly the same as shown on your screen.

4.1 Install Chipset Driver

Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to **\Driver_Chipset\Intel\ECM-BYT**.

Note: The installation procedures and screen shots in this section are based on Windows 8.1 operation system. If the warning message appears while the installation process, click Continue to go on.

Intel(R) Chipset Device Software
Welcome
You are about to install the following product:
Intel(R) Chipset Device Software
It is strongly recommended that you exit all programs before continuing.
Press Next to continue, or press Cancel to exit the setup program.
Next
Cancel

Step1. Click **Next**.

Intel(R) Chipset Device Software
License Agreement
INTEL SOFTWARE LICENSE AGREEMENT (OEM / IHV / ISV Distribution & Single User)
IMPORTANT - READ BEFORE COPYING, INSTALLING OR USING.
Do not use or load this software and any associated materials (collectively, the "Software") until you have carefully read the following terms and conditions. By loading or using the Software, you agree to the terms of this Agreement. If you do not wish to so agree, do not install or use the Software.
Please Also Note:
* If you are an Original Equipment Manufacturer (OEM), Independent Hardware Vendor (IHV), or Independent Software Vendor (ISV), this complete LICENSE AGREEMENT applies;
* If you are an End-User, then only Exhibit A, the INTEL SOFTWARE LICENSE AGREEMENT, applies.
Back
Accept
Cancel

Step 2. Click **Accept**.

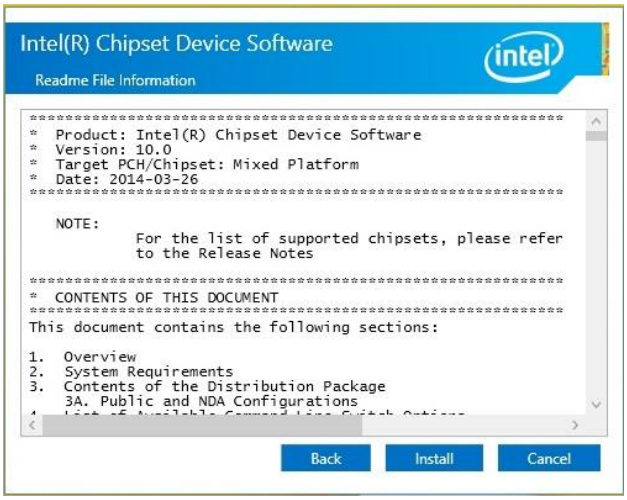

Step 3. Click **Install**.

Step 4. Click **Finish** to complete setup.

4.2 Install MBI Driver

Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to **\Utility\ECM-BYT_MBI**.

Note: The installation procedures and screen shots in this section are based on Windows 8.1 operation system. If the warning message appears while the installation process, click Continue to go on.

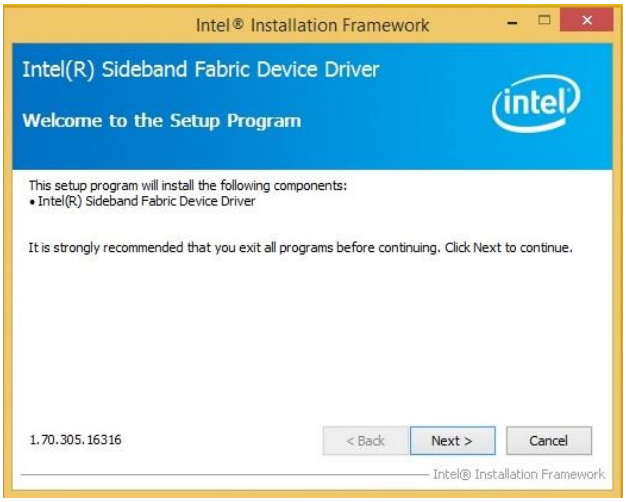
Intel® Installation Framework
Intel(R) Sideband Fabric Device Driver
Welcome to the Setup Program
This setup program will install the following components:
• Intel(R) Sideband Fabric Device Driver
It is strongly recommended that you exit all programs before continuing. Click Next to continue.
1.70.305.16316
< Back
Next >
Cancel
Intel® Installation Framework

Step1. Click **Next** to start installation.

Intel® Installation Framework
Intel(R) Sideband Fabric Device Driver
License Agreement
You must accept all of the terms of the license agreement in order to continue the setup program. Do you accept the terms?
INTEL SOFTWARE LICENSE AGREEMENT (OEM / IHV / ISV Distribution & Single User)
IMPORTANT - READ BEFORE COPYING, INSTALLING OR USING.
Do not use or load this software and any associated materials (collectively, the "Software") until you have carefully read the following terms and conditions. By loading or using the Software, you agree to the terms of this Agreement. If you do not wish to so agree, do not install or use the Software.
Please Also Note:
* If you are an Original Equipment Manufacturer (OEM), Independent Hardware Vendor (IHV), or Independent Software Vendor (ISV), this complete LICENSE AGREEMENT applies;
* If you are an End-User, then only Exhibit A, the INTEL SOFTWARE LICENSE AGREEMENT,
< Back
Yes
No
Intel® Installation Framework

Step 2. Click **Yes** to accept license agreement.

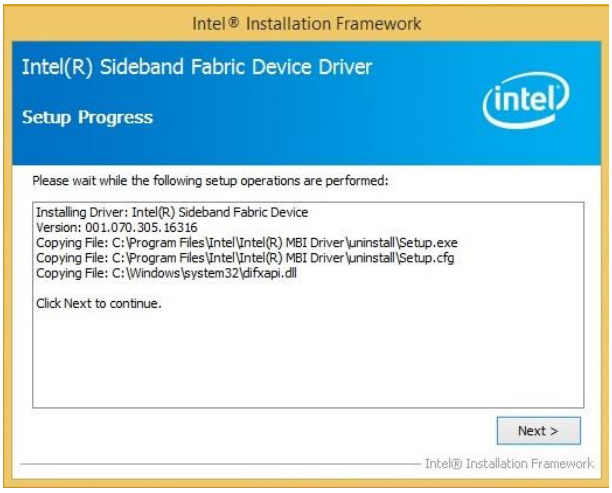
Intel® Installation Framework
Intel(R) Sideband Fabric Device Driver
Setup Progress
Please wait while the following setup operations are performed:
Installing Driver: Intel(R) Sideband Fabric Device
Version: 001.070.305.16316
Copying File: C:\Program Files\Intel\Intel(R) MBI Driver\uninstall\Setup.exe
Copying File: C:\Program Files\Intel\Intel(R) MBI Driver\uninstall\Setup.cfg
Copying File: C:\Windows\system32\difxapi.dll
Click Next to continue.
Next >
Intel® Installation Framework

Step 3. Click **Next** to proceed setup.

Intel® Installation Framework
Intel(R) Sideband Fabric Device Driver
Setup Is Complete
You must restart this computer for the changes to take effect. Would you like to restart the computer now?
Yes, I want to restart this computer now.
No, I will restart this computer later.
Click Finish, then remove any installation media from the drives.
Finish
Intel® Installation Framework

Step 4. Click **Finish** to complete setup.

4.3 Install TXE Driver

Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to **\Utility\ECM-BYT_TXE**.

Note: The installation procedures and screen shots in this section are based on Windows 8.1 operation system. If the warning message appears while the installation process, click Continue to go on.

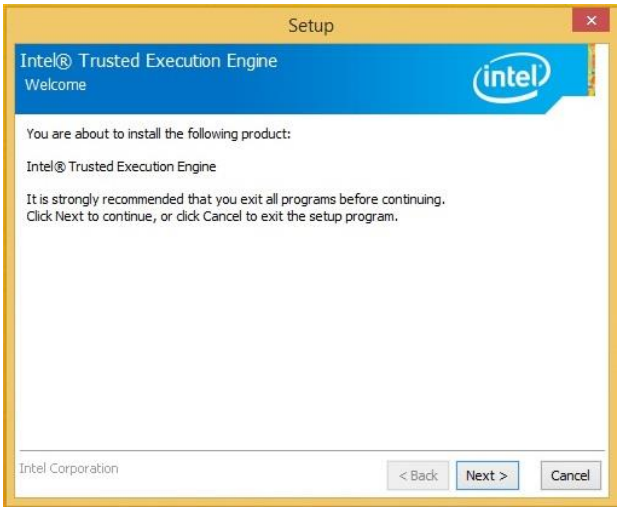
Setup
Intel® Trusted Execution Engine
Welcome
You are about to install the following product:
Intel® Trusted Execution Engine
It is strongly recommended that you exit all programs before continuing.
Click Next to continue, or click Cancel to exit the setup program.
Intel Corporation
< Back
Next >
Cancel

Step1. Click **Next** to start installation.

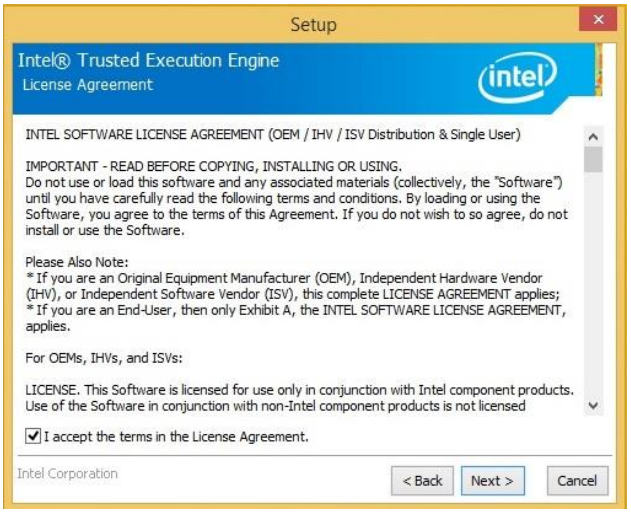
Setup
Intel® Trusted Execution Engine
License Agreement
INTEL SOFTWARE LICENSE AGREEMENT (OEM / IHV / ISV Distribution & Single User)
IMPORTANT - READ BEFORE COPYING, INSTALLING OR USING.
Do not use or load this software and any associated materials (collectively, the "Software") until you have carefully read the following terms and conditions. By loading or using the Software, you agree to the terms of this Agreement. If you do not wish to so agree, do not install or use the Software.
Please Also Note:
* If you are an Original Equipment Manufacturer (OEM), Independent Hardware Vendor (IHV), or Independent Software Vendor (ISV), this complete LICENSE AGREEMENT applies;
* If you are an End-User, then only Exhibit A, the INTEL SOFTWARE LICENSE AGREEMENT, applies.
For OEMs, IHVs, and ISVs:
LICENSE. This Software is licensed for use only in conjunction with Intel component products. Use of the Software in conjunction with non-Intel component products is not licensed
I accept the terms in the License Agreement.
Intel Corporation
< Back
Next >
Cancel

Step 2. Click **Next**.

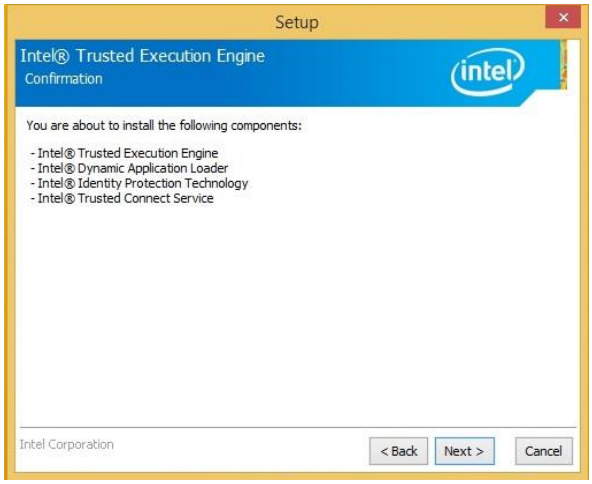

Step 3. Click **Next** to continue installation.

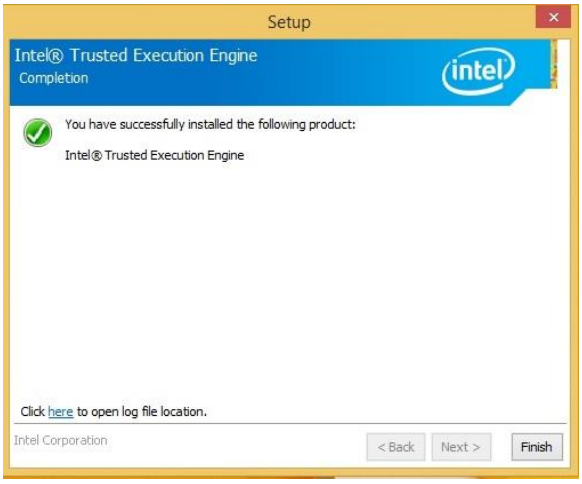

Step 4. Click **Finish** to complete setup.

4.4 Install VGA Driver

Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to **\VGA\ECM-BYT**.

Note: The installation procedures and screen shots in this section are based on Windows 8.1 operation system.

Intel® Installation Framework
Intel® Graphics Driver
Welcome to the Setup Program
This setup program will install the following components:
- Intel® Graphics Driver
- Intel® Display Audio Driver
It is strongly recommended that you exit all programs before continuing. Click Next to continue.
Automatically run WinSAT and enable the Windows Aero desktop theme (if supported).
< Back
Next >
Cancel
Intel® Installation Framework

Step 1. Click **Next** to continue installation.

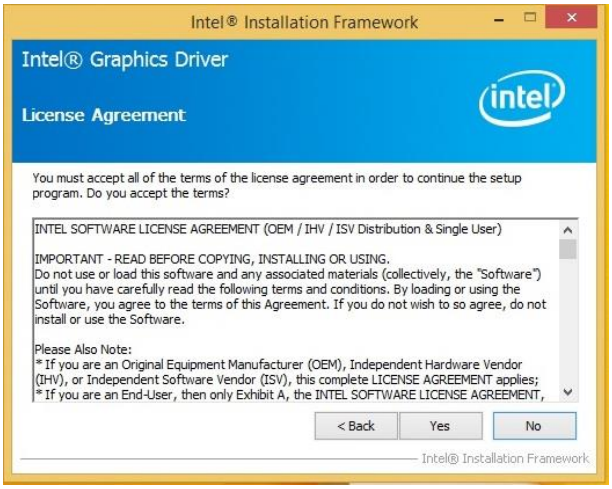
Intel® Installation Framework
Intel® Graphics Driver
License Agreement
You must accept all of the terms of the license agreement in order to continue the setup program. Do you accept the terms?
INTEL SOFTWARE LICENSE AGREEMENT (OEM / IHV / ISV Distribution & Single User)
IMPORTANT - READ BEFORE COPYING, INSTALLING OR USING.
Do not use or load this software and any associated materials (collectively, the "Software") until you have carefully read the following terms and conditions. By loading or using the Software, you agree to the terms of this Agreement. If you do not wish to so agree, do not install or use the Software.
Please Also Note:
* If you are an Original Equipment Manufacturer (OEM), Independent Hardware Vendor (IHV), or Independent Software Vendor (ISV), this complete LICENSE AGREEMENT applies;
* If you are an End-User, then only Exhibit A, the INTEL SOFTWARE LICENSE AGREEMENT,
< Back
Yes
No
Intel® Installation Framework

Step 2.

Click **Yes** to accept license agreement.

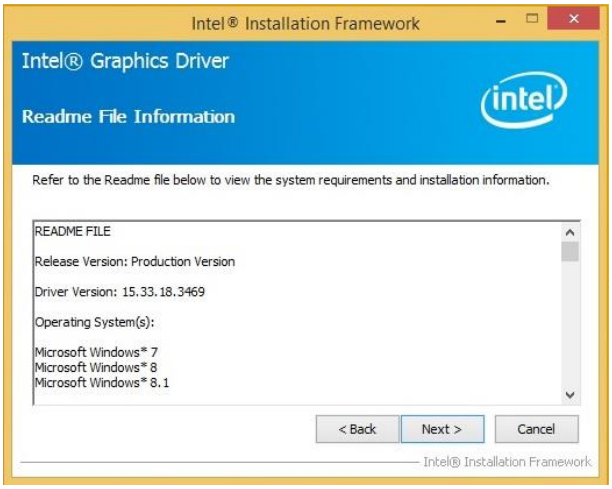

Step 3. Click **Next.**

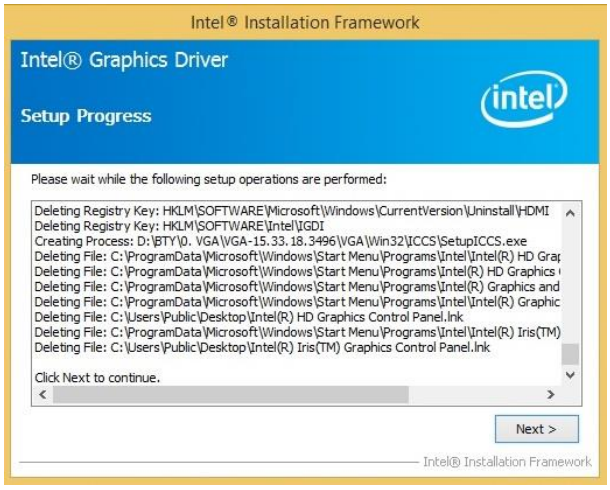
Intel® Installation Framework
Intel® Graphics Driver
Setup Progress
Please wait while the following setup operations are performed:
Deleting Registry Key: HKLM\SOFTWARE\Microsoft\Windows\CurrentVersion\Uninstall\HDMI
Deleting Registry Key: HKLM\SOFTWARE\Intel\IGDI
Creating Process: D:\BTY\0. VGA\VGA-15.33.18.3496\VGA\Win32\ICCS\SetupICCS.exe
Deleting File: C:\ProgramData\Microsoft\Windows\Start Menu\Programs\Intel\Intel(R) HD Gra
Deleting File: C:\ProgramData\Microsoft\Windows\Start Menu\Programs\Intel(R) HD Graphics
Deleting File: C:\ProgramData\Microsoft\Windows\Start Menu\Programs\Intel(R) Graphics and
Deleting File: C:\ProgramData\Microsoft\Windows\Start Menu\Programs\Intel\Intel(R) Graphic
Deleting File: C:\Users\Public\Desktop\Intel(R) HD Graphics Control Panel.lnk
Deleting File: C:\ProgramData\Microsoft\Windows\Start Menu\Programs\Intel\Intel(R) Iris(TM)
Deleting File: C:\Users\Public\Desktop\Intel(R) Iris(TM) Graphics Control Panel.lnk
Click Next to continue.
Next >
Intel® Installation Framework

Step 4. Click **Next**.

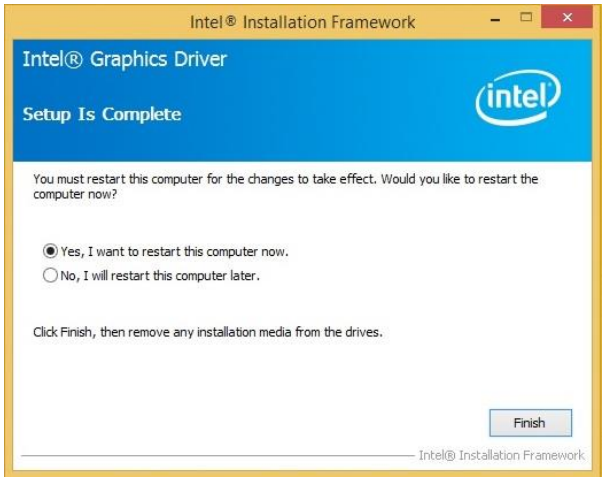
Intel® Installation Framework
Intel® Graphics Driver
Setup Is Complete
You must restart this computer for the changes to take effect. Would you like to restart the computer now?
Yes, I want to restart this computer now.
No, I will restart this computer later.
Click Finish, then remove any installation media from the drives.
Finish
Intel® Installation Framework

Step 5. Click **Finish** to complete setup.

4.5 Install Audio Driver (For Realtek ALC892)

Insert the Supporting CD-ROM to CD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to **\Driver_Audio\Realtek\ALC892\ECM-BYT_Audio**.

Note: The installation procedures and screen shots in this section are based on Windows 8.1 operation system.

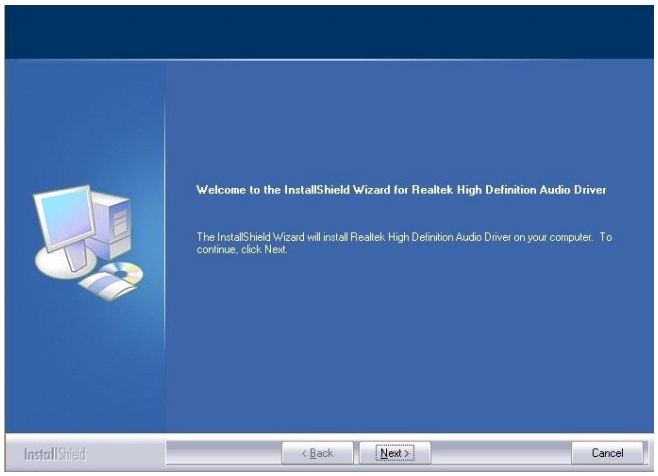
Welcome to the InstallShield Wizard for Realtek High Definition Audio Driver
The InstallShield Wizard will install Realtek High Definition Audio Driver on your computer. To continue, click Next.
InstallShield
< Back
Next >
Cancel

Step 1. Click **Next** to continue setup.

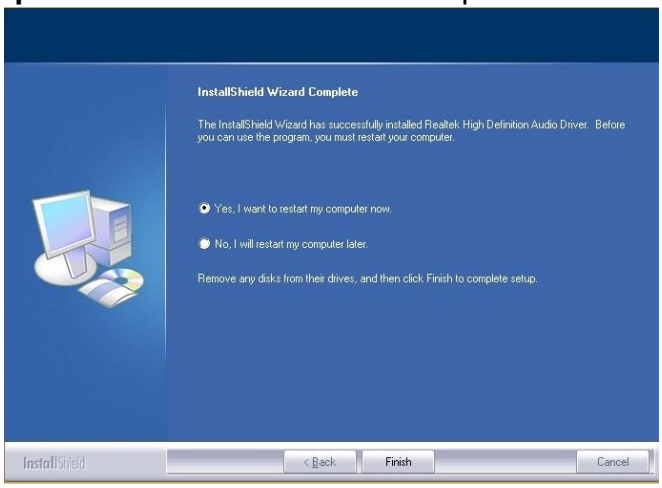
InstallShield Wizard Complete
The InstallShield Wizard has successfully installed Realtek High Definition Audio Driver. Before you can use the program, you must restart your computer.
Yes, I want to restart my computer now.
No, I will restart my computer later.
Remove any disks from their drives, and then click Finish to complete setup.
InstallShield
< Back
Finish
Cancel

Step 2. Click **Finish** to complete the setup.

4.6 Install Ethernet Driver (For Intel I211AT)

Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to **\Driver_Gigabit\Intel\I211AT\ECM-BYT_LAN**.

Note: The installation procedures and screen shots in this section are based on Windows 8.1 operation system.

Intel(R) Network Connections Install Wizard
Welcome to the install wizard for Intel(R) Network Connections
Installs drivers, Intel(R) Network Connections, and Advanced Networking Services.
WARNING: This program is protected by copyright law and international treaties.
< Back
Next >
Cancel

Step 1. Click **Next**.

Intel(R) Network Connections Install Wizard
License Agreement
Please read the following license agreement carefully.
INTEL SOFTWARE LICENSE AGREEMENT
IMPORTANT - READ BEFORE COPYING, INSTALLING OR USING.
Do not copy, install, or use this software and any associated materials (collectively, the "Software") provided under this license agreement ("Agreement") until you have carefully read the following terms and conditions.
By copying, installing, or otherwise using the Software, you agree to be bound by the terms of this Agreement. If you do not agree to the terms of this Agreement,
I accept the terms in the license agreement
I do not accept the terms in the license agreement
Print
< Back
Next >
Cancel

Step 2. Click **Next** to accept license agreement.

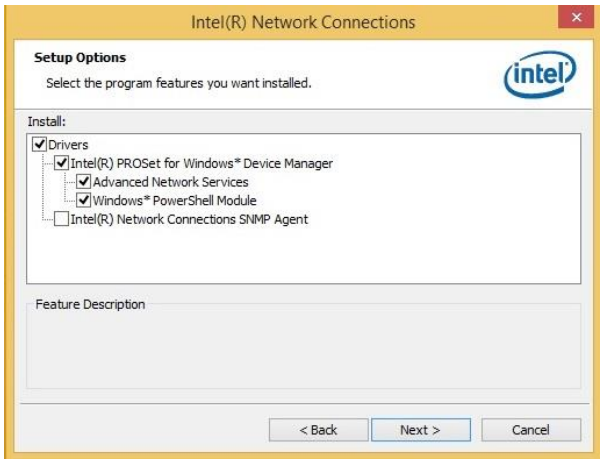

Step 3. Click **Next**.

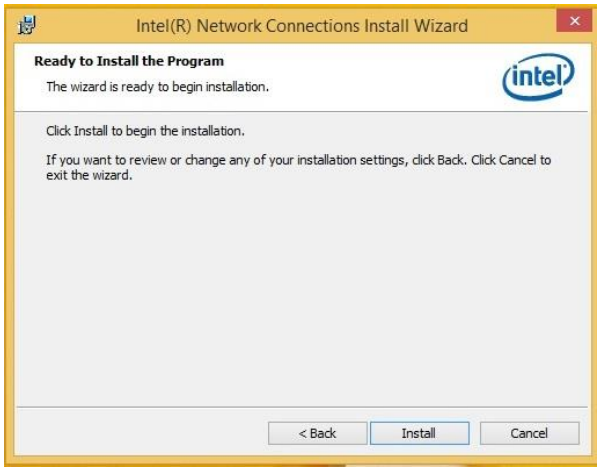
Intel(R) Network Connections Install Wizard
Ready to Install the Program
The wizard is ready to begin installation.
Click Install to begin the installation.
If you want to review or change any of your installation settings, click Back. Click Cancel to exit the wizard.
< Back
Install
Cancel

Step 4. Click **Install** to proceed.

Intel(R) Network Connections Install Wizard
Install wizard Completed
To access new features, open Device Manager, and view the properties of the network adapters.
< Back
Finish
Cancel

Step 5. Click **Finish** to complete the setup

5. Mechanical Drawing

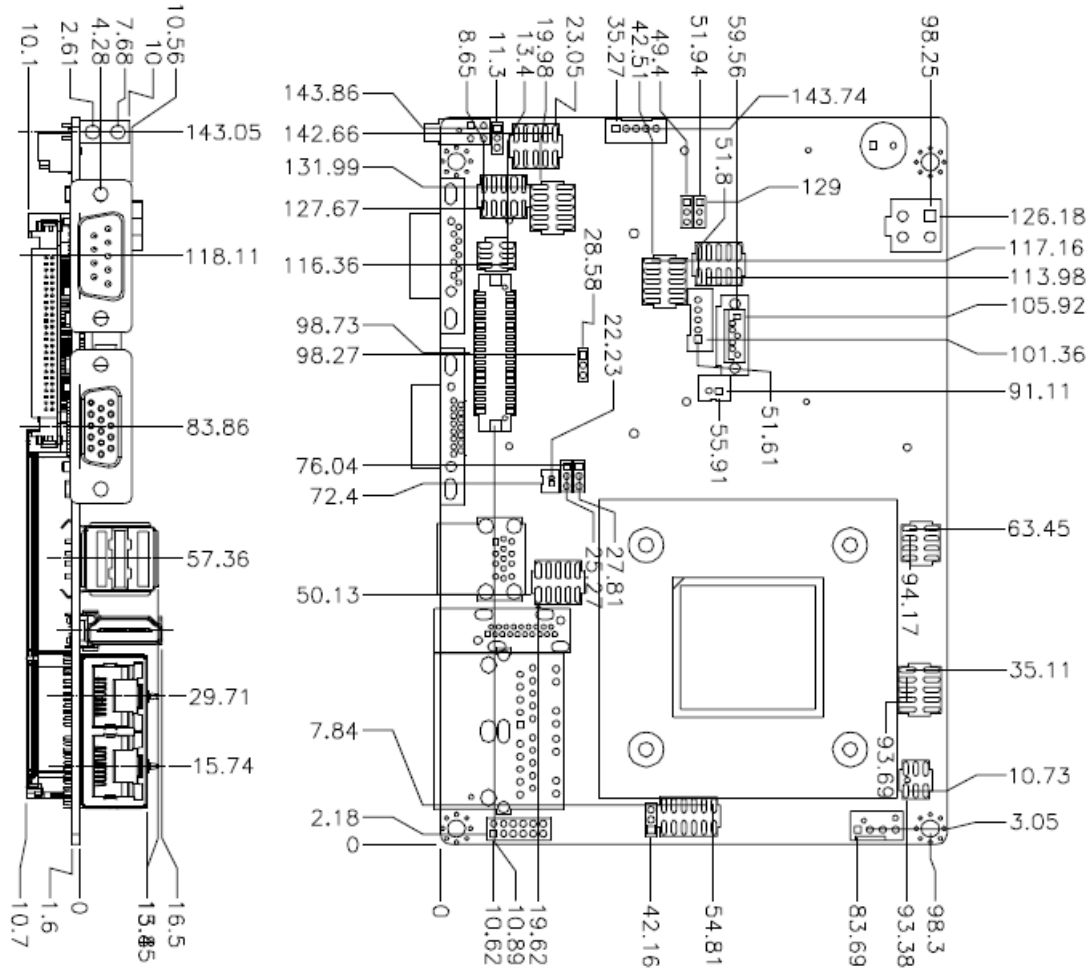
10.1
2.61
4.28
7.68
10
10.56
143.05
118.11
83.86
57.36
29.71
15.74
10.7
1.6
0
15.85
16.5
8.65
11.3
13.4
19.98
23.05
35.27
42.51
49.4
51.94
59.56
143.74
98.25
143.86
142.66
131.99
127.67
116.36
98.73
98.27
76.04
72.4
50.13
7.84
2.18
0
51.8
129
126.18
117.16
113.98
105.92
101.36
91.11
28.58
22.23
55.91
51.61
63.45
94.17
35.11
93.69
10.73
3.05
25.27
27.81
0
10.62
10.89
19.62
42.16
54.81
83.69
93.38
98.3

Unit: mm

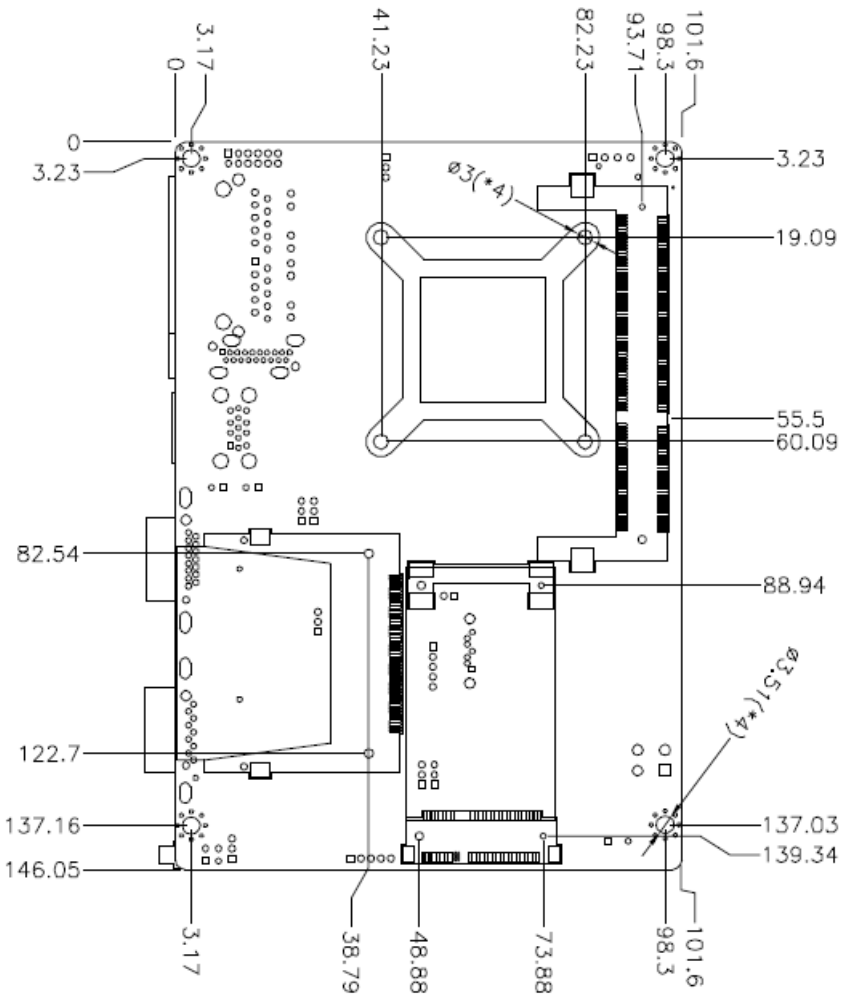
0
3.17
41.23
82.23
93.71
98.3
101.6
0
3.23
3.23
Ø3(*4)
19.09
55.5
60.09
82.54
88.94
Ø3.51(*4)
122.7
137.16
137.03
146.05
139.34
3.17
38.79
48.88
73.88
98.3
101.6

Unit: mm